

Raingler

NETS & GRIPS

2022 - Newer Nissan Frontier Crew Cab Barrier Net Install

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: 45-60 minutes




Paw Level:

Tools: 10mm Socket & Extension (or deep well socket)
Ratchet or Cordless Driver
Panel Removal Tool or a Small Flat Blade Screwdriver can be carefully used too.

Step 1

Slide and tilt front seats forward for access to the B pillar trim.

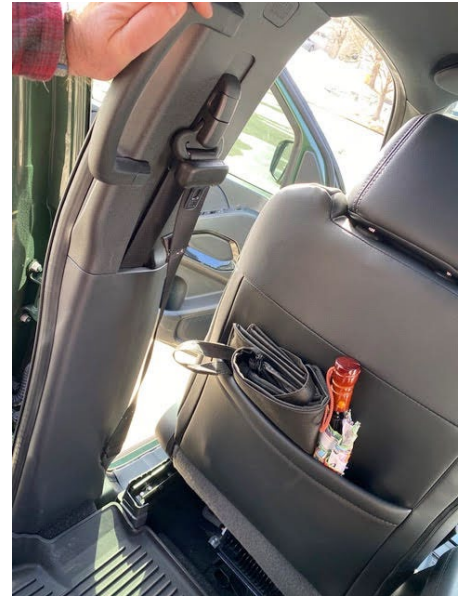


Step 2

Carefully push back bolt covers on the handles. You can often do this by hand pushing towards rear of cabin and then popping up back side to expose the bolts.



Step 3

Remove 10mm bolts and then handle.

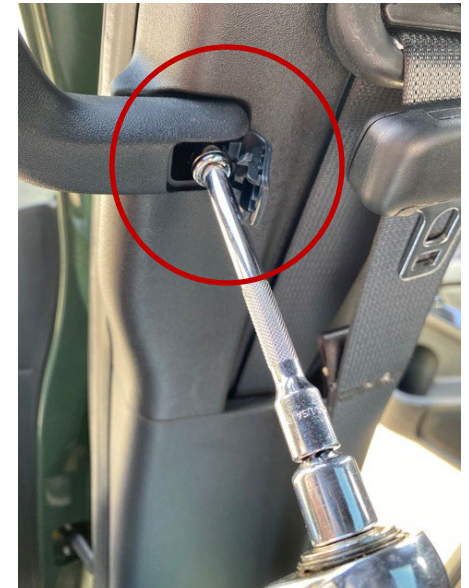

Raingler
NETS & GRIPS

Step 4

Gently pull back both front and back door opening weatherstripping rubber at top corners of the B pillar. No need to go past the lower panel.



Step 5

Carefully pop off the bolt cover from the lower center (similar to the previous bolt covers) with “SRS” stamp.

*Note: the cover denotes the vehicle is equipped with such. DO NOT alter or modify any lines that you may see behind this cover panel.



Step 6

You may need to slide down the shoulder harness if you have it in the top position.



Raingler
NETS & GRIPS

Step 7

Remove the top 10mm bolt.



*Watch that you don't drop it down behind the panel.



Step 8

While paying attention to the inside trim and where it presses into the inner cab structure, gently pop the top of the B pillar trim loose enough to access (and see behind for reassembly).

You will install the C100X tether strap by tilting the black square ring up and align the mount tab hole over the bolt while feeding the tether and D ring over the trim panel towards center of cabin. Gently line up trim piece and press back into position. It's a few motions to coordinate just go slow and don't force anything as there are some press in fasteners on the backside.

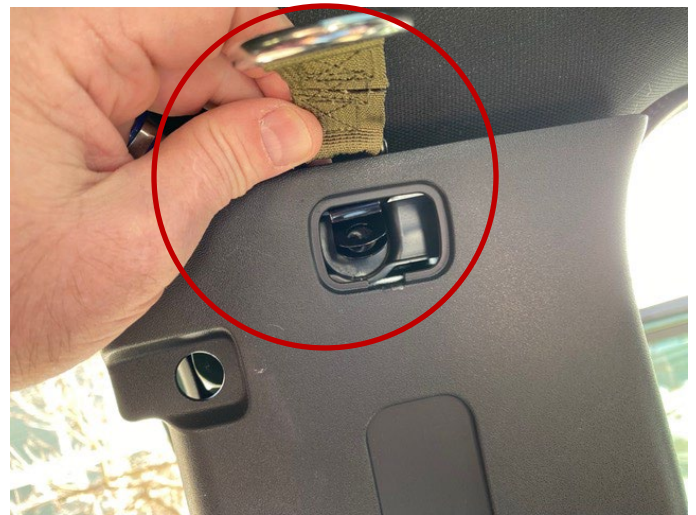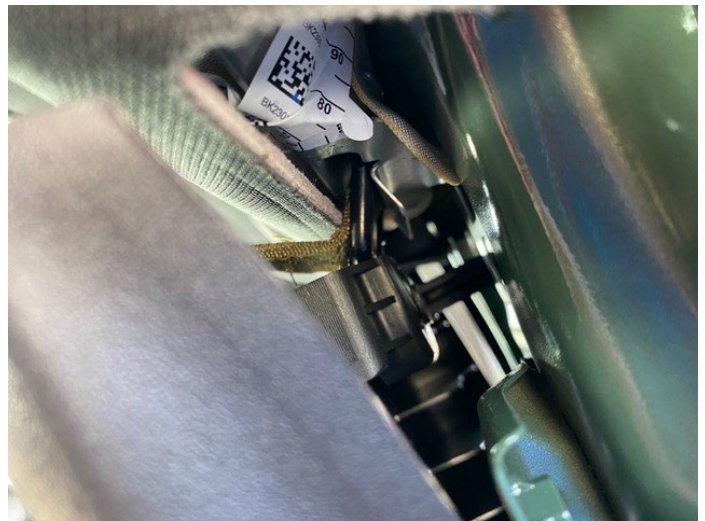

Raingler
NETS & GRIPS

Step 9

Reinstall bolt keeping the D ring outside and over the trim piece.



Step 10

Reinstall handle bolts, covers and weatherstripping.



Raingler
NETS & GRIPS


Step 11

Loosely install straps on barrier net working from top to bottom, D ring on tether, OEM grab handle and then under front seat bracket.



Step 12

Move seats to normal positions and then center barrier and tighten straps from top to bottom with built on cam buckles. Wrap and tuck excess end straps. You can see how to do in this short video: <https://vimeo.com/316588617>

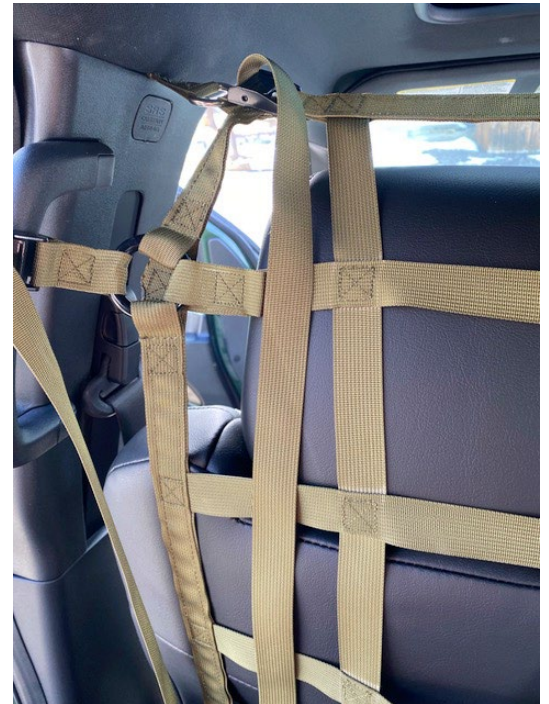

Step 13

Double check there are no unfastened or loose weatherstripping areas and that the seatbelts are unrestricted and enjoy and use your new Raingler Net!

Be sure to share your installation by tagging us or posting a review! Of course, any questions or help needed, just let us know! help@raingler.com

Thank you for purchasing Raingler Nets.

See all our install videos on Vimeo!
<https://vimeo.com/raingler>

Raingler
NETS & GRIPS