

Raingler **NETS & GRIPS**

**2015 – Newer Toyota Tacoma Ceiling Net
Supplemental Install Notes**

C100GS Hardware Install Kit

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: 30 minutes

Paw Level:



Tools:


1. Drill and small drill bits
2. Phillips head screwdriver
3. Needle nose pliers
4. Auto trim removal tool (a small flat blade can also be used)

The C100GS KIT is included with your ceiling net purchase. If your OEM hooks are not retaining your net securely, you can add these supplied D-rings (kit includes 12# screws).

Step 1. Carefully pop open the ceiling hooks cover.



Step 2. Remove the OEM hook by releasing the spring clip with a flat blade or small needle nose pliers. BE CAREFUL not to let it get lost if it falls out of the hook. Carefully drill the pilot hole from the top side of the plastic hook once removed, and gently hand install the #12 screw holding down the grommet on the mount. Attach the hardware with the D-ring facing up, as shown. Place the hook back to the opening in the ceiling. Press the metal clip in place. You may find it easier to use the pliers to compress and then reinstall into position.

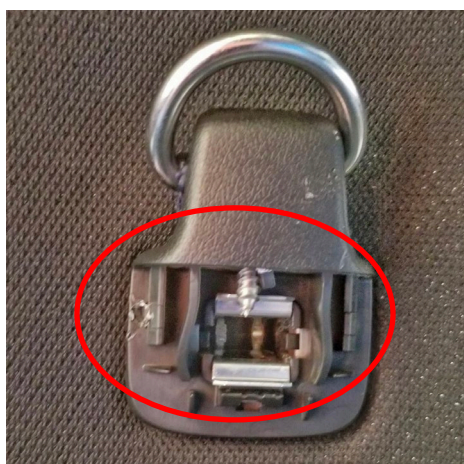

Raingler
NETS & GRIPS

Step 3. Replace plastic cover.



Step 3. Wrap and tuck the excess strap ends as detailed in [this video](#).



**Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!**

**See all our install videos on Vimeo!
<https://vimeo.com/raingler>**