

Raingler

NETS & GRIPS

2016 – Newer Toyota Tacoma Ceiling Net Supplemental Install Notes

C100GS Hardware Install Kit

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

If you do not feel comfortable performing this installation, contact most auto accessory, upholstery, off-road center or mechanic to perform the installation for a solid installation that will serve you for many years to come.

Time: 30 minutes

Paw Level: 

Tools:



1. Drill
2. Phillips head screwdriver
3. Flat blade or needle nose pliers

The C100GS KIT is included with your ceiling net purchase. If your OEM hooks are not retaining your net securely, you can add these supplied D-rings (kit includes 12# screws).

Step 1. Remove the plastic cover.



Step 2. Remove the OEM hook by releasing the spring clip with a flat blade or small needle nose pliers. BE CAREFUL not to let it get lost if it falls out of the hook. Carefully drill the pilot hole from the top side of the plastic hook once removed, and gently hand install the #12 screw holding down the grommet on the mount. Attach the hardware with the D-ring facing up, as shown.

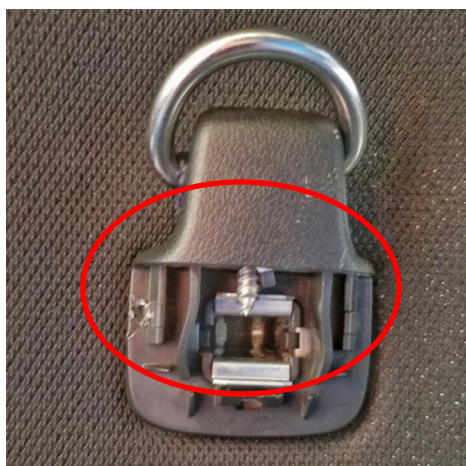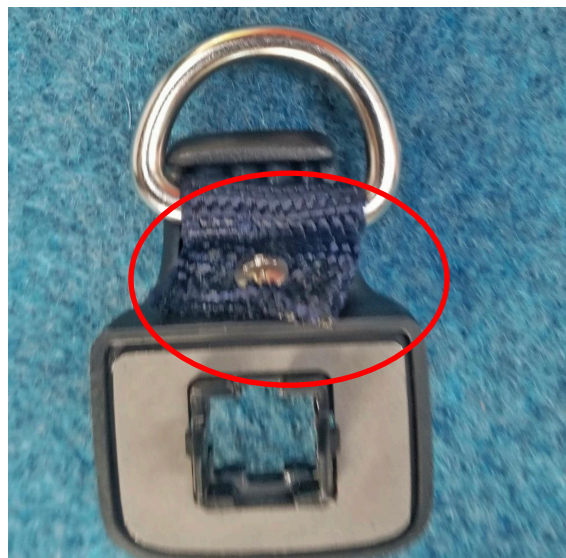

Raingler
NETS & GRIPS

Step 3. Reattach the clip to the panel;
replace plastic cover.



Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!

See all our install videos on Vimeo!
<https://vimeo.com/raingler>

Raingler
NETS & GRIPS