

Raingler

NETS & GRIPS

Install for C100 D-ring Strap Set for Upper Barrier Mounts & Ceiling Net Systems

*Notes for Toyota 4Runner 5th Gen
(Shown on 2016 Toyota 4Runner)*

NOTE: We offer several styles of barrier and ceiling nets for the 4Runner. Your particular barrier or ceiling net may not use all these mounting points. For example, the rear ceiling net (above the cargo or 3rd row seat area) will only use C-pillar and D-pillar mount points.

REFERENCE: We provide a [PDF file showing interior trim panels and their attaching points](#) on our installations page. It is important that you work carefully and reference the file for known mounting points. An example is the C-pillar, also known as a garish panel, is shown on illustration 44 on the Toyota interior PDF file.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

It is imperative that one must look carefully for hidden washer lines, wiring and of course do not disturb SRS systems during any process. If you are uncomfortable in your ability to do these steps, please seek a qualified mechanic to perform the installation for you.

Time: 45 – 60 minutes



Paw Level:

Tools:

1. Panel remover tool
2. drill and pilot hole drill bit
3. May need Torx bit (Usually T-45, T-47, or T-50 sizes)
4. Socket set for seat belt bolts
5. other assorted small screw or tore bits to remove trim panels.

B-Pillar mounts:

This medium length strap pair is about 2.5" length webbing. SKU C100M, ILL 22 on the Toyota disassembly PDF.

See video here for details: <https://vimeo.com/316655122>

Step 1. Loosen and remove pillar trim.



Step 2. Locate placement for D-ring strap.


***Note:** The strap should face straight to center of vehicle, parallel to the ceiling. If installed too low it will pull down on the reassembled trim, too high and the headliner could be damaged.

Generally, place it as close to the top edge of the plastic trims location as possible.



Raingler
NETS & GRIPS


Step 3. Install the footman and D-ring strap.

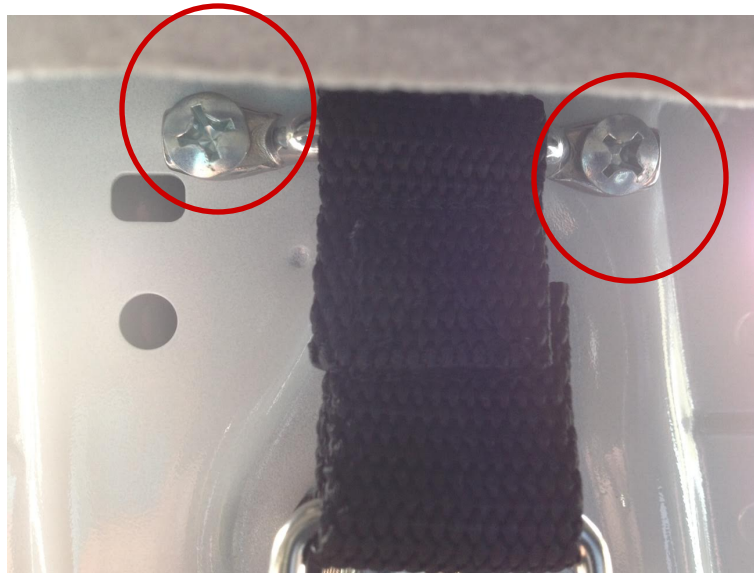

Step 4. Reassemble trim and final check for alignment.



Side view of final positioning.

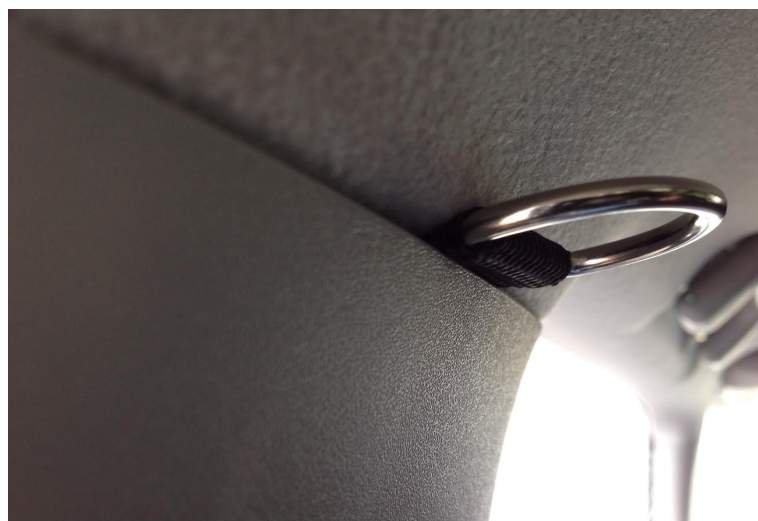

Raingler
NETS & GRIPS

866-905-7625 | tech@raingler.com | Raingler.com

C-Pillar mounts:

These are the shorter straps for the C-pillar, about 2" webbing length.
SKU C100S, ILL 45 on Toyota disassembly PDF.

Step 1. Loosen rubber trim, then grasp and twist panel trim. There are two upper dividers and 2 hooks towards the front and one towards the rear to get to point shown. If your panel will not pop back and loose easily, you may need to disassemble the lower panel to allow it to drop down easier.

Note: See the Toyota disassembly PDF under ILL 42 for details.



Step 2. Install the D-ring strap as in above procedures in this approximate location.



Step 3. Reassemble and check final alignment.



Raingler
NETS & GRIPS

D-Pillar mounts:

These are longer, about 3.5" webbing length straps.
SKU C100L, ILL 43 on Toyota disassembly PDF

Step 1. Loosen upper part of D-pillar trim
(passenger side shown)



Step 2. Install as above mounts in this
approximate location.
Watch for lines here.



Raingler
NETS & GRIPS

Step 3. Reassemble and check final alignment towards center of cabin.



Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!

See all our install videos on Vimeo!
<https://vimeo.com/raingler>

