

Barrier Net Install

Chevrolet / GMC Trailblazer / Envoy / Acadia

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: About 60-90 minutes



Paw Level: Hardware:

- 1. Front seat hardware kit required
- 2. For behind 2nd row seat installs:
 - 4 square HD rings with tab
 - 2 Footman mounts with screws

Tools: (may vary by vehicle)

- 1. 5/16" Socket
- 2. Small drill bit for screw pilot hole
- 3. Phillips bit
- 4. Drill with socket adapter

This document also details optional mounting behind front seats.

Step 1

Below steps 1-6 shown on driver's side in cabin. Remove rear ceiling plastic hooks with 5/16" socket



Step 2

Install square rings above plastic hook and reassemble with ring facing towards front of cabin.



Step 3

Remove Phillips screw on side panel below 1/4 window. Install square rings and reassemble with ring able to fold forward orientation and tighten OEM screw as shown.





Loosely install net as shown with top side having the second side ring between the 3rd and 4th row of webbing. The lower edge of the barrier will hang for now.



Step 5

Tilt the rear seats forward and locate the outer bracket mounted to the floor. Wrap the lowest straps around loosely and double check for clearances. The part the net mounts to remains stationary.



Step 6

Stretch remaining side straps towards wheel well. Check for any lines running underneath and drill and mount the footman mount in approximate location shown here.



After all straps are fed through buckles, start by tightening from top to bottom and wrap and tuck excess strapfor a clean finished look.





Install Instructions for behind the front seats using optional front seat hardware kit.

Hardware:

2 pair Toggle bolt kits2 each Squre heavy duty rings

Tools:

5/16" socket
Drill with socket adaptor
1/2" drill bit with smaller bits to start pilot
hole. Small flat blade or similar to remove
plastic trim

Step 1

Carefully pop off trim cover from forward side of ceiling handle to expose the 5/16" nut.

Step 2

Install square ring and reassemble as shown.



Hang net onto the installed square rings.










Step 4From the front seats; feed lowest strap on each side into opening between upper and lower portion of seats.



Step 5Wrap strap towards side and tuck into gap to hide.

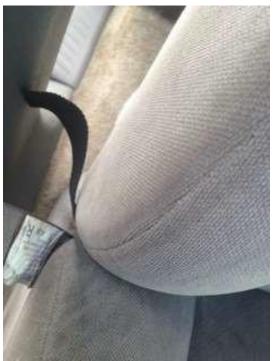



Loosely install end of strap into buckle.



Step 7

The remaining side straps will need mounts installed on the B-pillar in the approximate areas shown. Do check for any hidden obstacles before drilling pilot hole. You will need to drill both plastic and the inner metal support for proper mounting of the toggle bolts. Please see our toggle bolt installation guide at rainglerinstall.com if you are not familiar with how these install.

Lower side:

Upper side:







The top should be tighter as much as possible, work your way down the side B-pillars and finally, the lowest strap on the seat.



Step 9

Wrap and tuck extra strap paying attention to reclining and seat track position before final tightening.

NOTE: the barrier is not a substitute for properly securing gear in vehicle. Use safety minded procedures for securing your items in the vehicle. If you are training a dog to ride in the vehicle we use and recommend spray on dog deterrents against teething or chewing auto interiors including our products. Please do not leave any animal unattended in any vehicle.



Check out the video here: https://vimeo.com/raingler



Thank you for purchasing Raingler Nets.

If you have any questions please contact us,
we are here to help!