

Raingler

NETS & GRIPS

Sprinter Passenger Van 2" Rear Barrier Net Installation

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: approximately 2 hours

Paw Level:



Tools:

1. Panel removal tool
2. Drill
3. High Quality, Sharp Assorted Bits including 3/16
4. Hammer
5. Punch
6. Utility Knife

Required Hardware (three pair included): C107s footman bar and screws.

IMPORTANT! Check before doing any drilling. While we have quite a few of these installed with no issue with hidden lines or clearances, each vehicle may be different, especially if it's been modified from factory delivery. To be absolutely certain drop the rear A/C and trim and verify clearances.

Step 1

From rear of van, lay out net to see mount strap locations.



Step 2

Note locations where footmans are to be installed beside A/C trim on ceiling. There is a roof beam that the #12 screws will mount to at the roof headliner section point:

top drivers side:



mid drivers side:



top passenger mount:




mid passenger side above window:



Step 3

Once you determine location for footman mount holes, use a marker and then punch or piece the soft material enough to get an access hole to the inner metal.

For more info on installing footman loops please watch this similar hardware installation in various vehicles:
<https://vimeo.com/321352161>


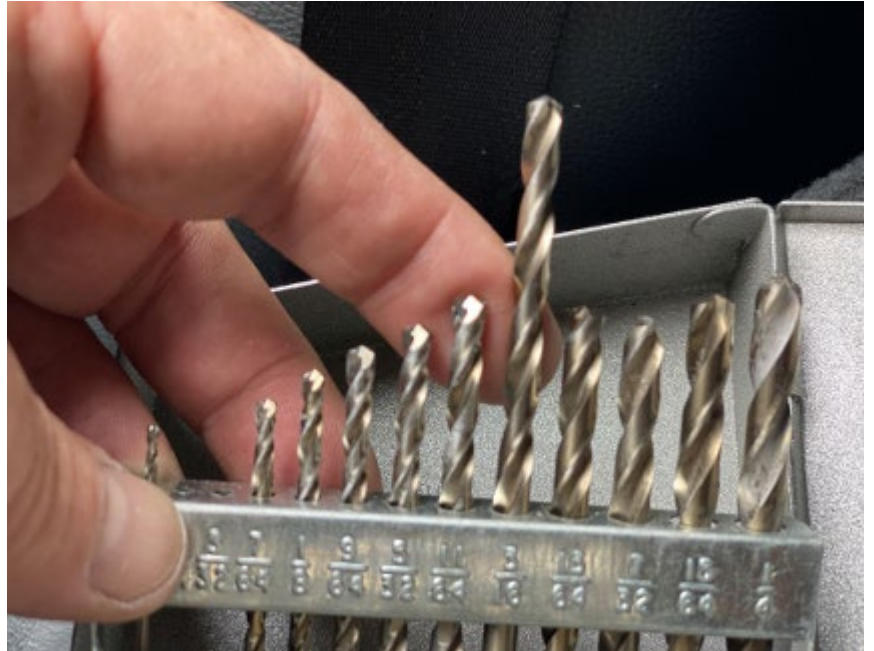


Step 4

Mount all 4 footmans and loosely hang net up. Logo to front or rear of van doesn't matter. Squeeze cam buckle tab to expose the teeth and feed strap's pointed end from underneath buckle and out through top.

Step 5

Loosely mount four center lower straps to factory points on seat brackets and lower corner cargo anchors or factory screws decal points.

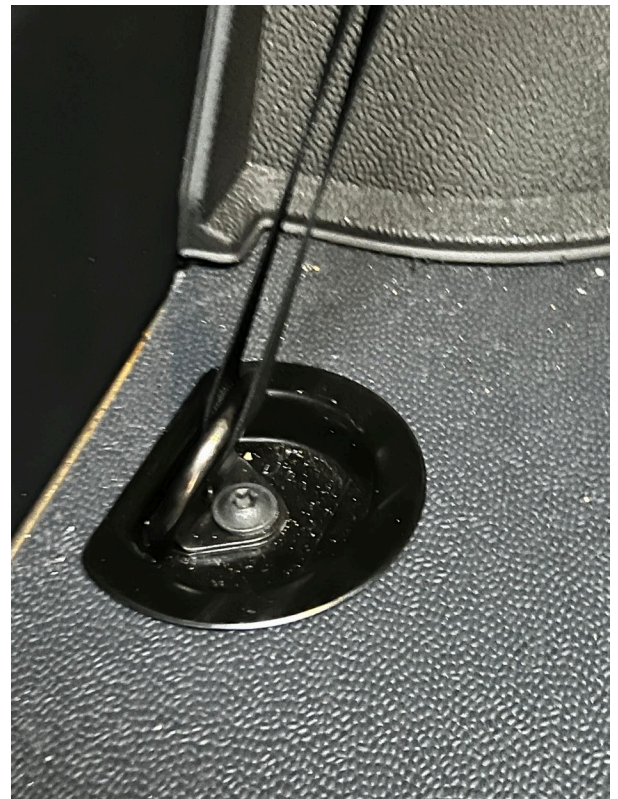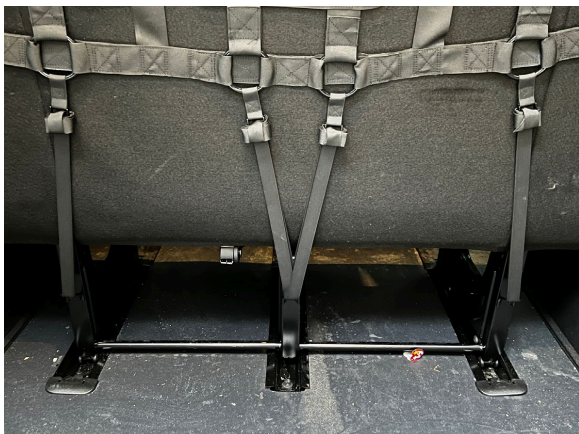

The two extra C107s footmans can be installed to the side wall or wheel well in the van if desired.



Step 6

Tension and hand tighten net top first and mid side straps tight and then lower 4 taking care to draw the net out flat and taut but as to not pull the net down much from top. Once centered and flat, cover up the buckles and take care of loose ends as shown in this video: <https://vimeo.com/316588617>



**Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!**

See all our install videos on Vimeo!
<https://vimeo.com/raingler>

Raingler
NETS & GRIPS