

Raingler

NETS & GRIPS

FJBN Barrier Net Install

2007 and newer Toyota FJ Cruiser

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: *About 30-60 minutes*



Paw Level:

Tools: *(may vary by vehicle)*

1. 1/8" drill bit
2. Drill
3. Phillips bit
4. 10 mm socket and wrench
5. *Possibly an extension for a countersunk bolt
6. Small flat blade or panel removal tool

The FJBN net domes with stainless steel screws, footman mounts and quick release upper loops for a clean and easily removed soft barrier for your 2007 and newer FJ Cruiser.

This installation isn't particularly difficult; however, it requires a little patience and carefulness in removing or pulling back the plastic rear side upper panels.

Step 1

Using a small flat blade screwdriver, pop off the round 10mm bolt cover just to the rear of the back-side door. The 10mm bolt is easy to loosen just watch that it doesn't fall into the cavity in the side panel. There are several plastic ribbed spears securing the upper side panels to the inner metal structure of the FJ, careful pulling the entire upper edge will normally loosen and remove them but it is best to not do so on a cold vehicle as they can easily break when cold.

Step 2

Place a footman loop (the small metal brackets in your FJBN kit) near the top of the metal side inner structure, above the seat belt anchor point and just enough below the headliner so that you can drill 2 pilot holes (1/8") You can see placement in IMG, but footman will not be fully installed until webbing loop with quick-release is placed onto it.

Drivers side:



Raingler
NETS & GRIPS

Step 3

Complete both side top only right now and clip the barrier net into place to hold your quick release clip from falling into side panels as you reassemble


Passenger side



Step 4

Attach sides and lower mounts as shown, tension as desired (seat up or down. Wrap and tuck any excess strap and enjoy.

Check out the video here:
<https://vimeo.com/raingler>

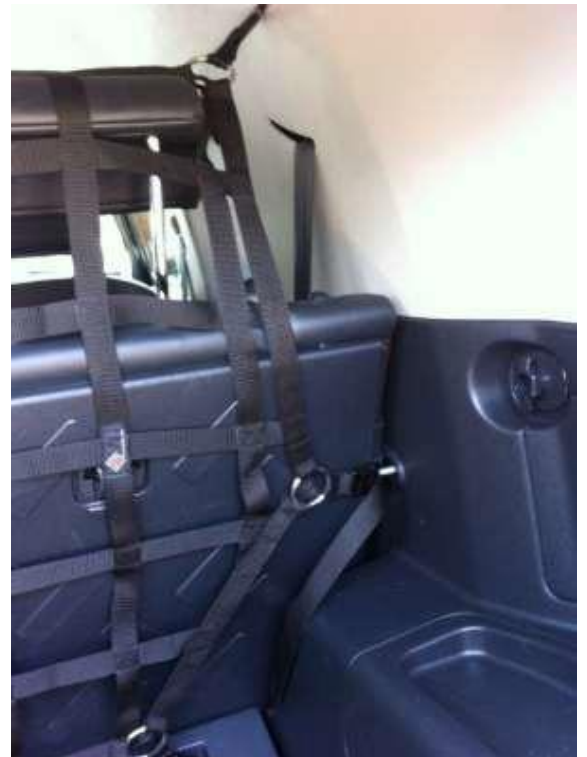

Raingler
NETS & GRIPS

Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!

866-905-7625 | Tech@RAINGLER.com | Raingler.com