

# Raingler

## NETS & GRIPS

---

### Full Barrier Install

### 5<sup>th</sup> Generation Toyota 4Runner

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

**IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING**

**Time:** *About 60-90 minutes*



**Paw Level:**

**Tools:** *(may vary by vehicle)*

1. Drill bit (5/32")
2. Phillips bit
3. Optional panel release tool for plastic lip and snaps

## Step 1

Grasp the C-pillar upper trip panel pulling down from ceiling towards center of vehicle. Pulling the back-door weather stripping will allow you to get a good edge to wiggle and pop it loose.



## Step 2

Using the small drill bit, drill the footman mount hole just above the factory small hole shown here just next to the window opening. Mark and drill the rear hole.



## Step 3

Carefully position the D-ring strap and complete mounting the footman and D-ring assembly as shown here, on the passenger side.



**Raingler**  
NETS & GRIPS

#### Step 4

Loop the D-ring strap up and over the plastic panel leg at the top of the trip piece. Line up the plastic panel snaps and pop into place, leaving the D-ring exposed.

Repeat for the other side and loosely install the net (Raingler logo facing out and up)



#### Step 5

Carefully pop off round cover cap to expose 10mm OEM bolt in quarter panel just below rear side window.




#### Step 6

Remove bolt and install black square ring as shown:



## Step 7

Loosely hang the barrier from the top straps and tension taut but not excessively tight. Go ahead and install the strap just past the third horizontal row, making sure the net is oriented as pictured here:

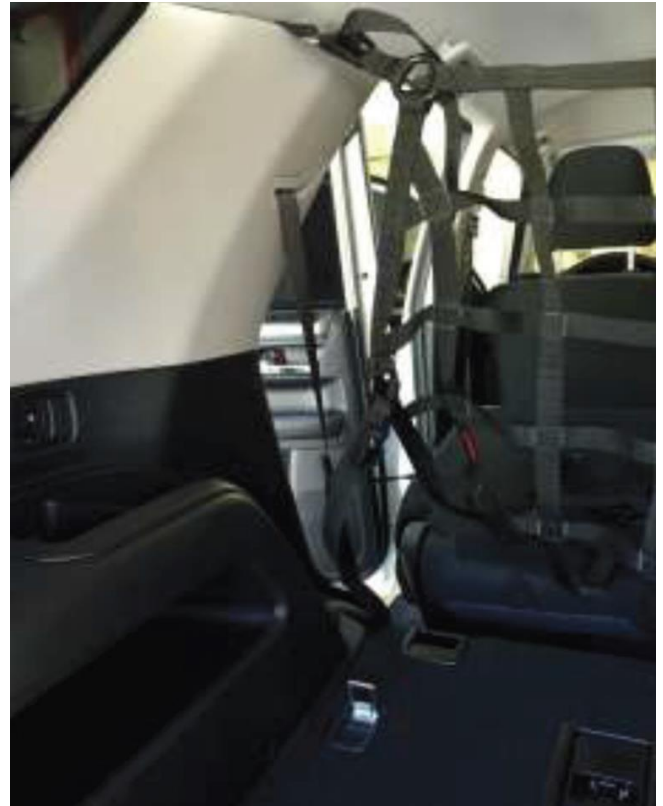

**Raingler**  
NETS & GRIPS



### Step 8

Feed the lowest two side straps through side of seat to the lower floor seat belt strap. Loosen with a 14mm after popping loose cap cover. Wrap two lower side straps around the shaft on the 14mm bolt above the threads as to not damage when reinstalling.

Alternate option: Install square rings on the seat belt bolt and thread your strap through.



### Step 9

Reinstall cap cover and tighten as needed after upper straps are tightened first. Tighten from top to bottom for highest fitment.



**Raingler**  
NETS & GRIPS

## Step 10

Secure lower strap to factory bracket under 2<sup>nd</sup> row seat.

**The barrier can be moved as desired, always re-tensioning as needed for seat back reclining position or cargo needs.**

Wrap and tuck excess after seats are set to desired position. The net is not designed to be used with passengers in the 3<sup>rd</sup> row and may not be compatible with any air bag systems for 3<sup>rd</sup> row seating. Always secure cargo in an appropriate manner.

**NOTE:** A video is on the Raingler YouTube channel showing how to finish off end strap neatly if desired.



Check out the video here:

<https://vimeo.com/raingler>



Thank you for purchasing Raingler Nets.  
If you have any questions please contact us,  
we are here to help!