

Raingler

NETS & GRIPS

Behind front seat barrier Jeep Cherokee XJ

shown on 2000-year model

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: 45 – 60 minutes



Paw Level:

Tools:

1. Drill
2. Bit slightly smaller than #12 screw
3. a 5/64 or similar Phillips Head Screwdriver or PH2 Bit
4. Torx 20 bit or driver
5. Sharpie
6. Something to trim plastic, like snips or knife



Step 1

Remove and/or loosen upper trim panel in the front and rear. You will need to remove the factory grab handle from front and rear on passenger side using the Torx driver. Flip the plastic cover back on each side to access. Driver's side only has a rear handle to remove. Pop back pillar panel a bit to allow room to work.




Step 2

Locate the best area to install the hardware. Just a little in front or behind peg hold for the panel works well. Mark your hole with the Sharpie pen before drilling. (Use peg on back of trim you removed and stick it in the top of the seatbelt harness area as shown below to keep it out of your way). Drill hole.



toward front

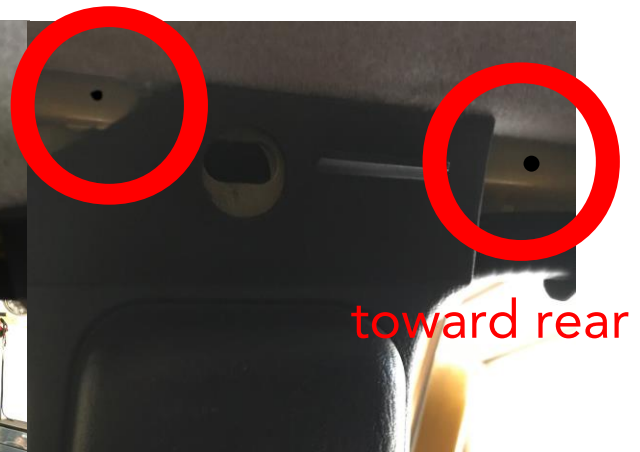

toward rear

We have installed this mount in two locations for different applications. For shorter people and to always keep seats forward, drill your holds in FRONT of the peg hold for the panel. If you like your seats pushed back all the way, then we suggest drilling the hole further back. See photo for reference.

Raingler
NETS & GRIPS

Step 3

Install hardware



Step 4

Reassemble front and rear upper trim, handles. Make sure that ring sticks fully out of the top of the panel.



Step 5

Repeat for Driver's side. Note that driver's side doesn't have a front grab handle. You may want to cut out the right front area of the center pillar for easier access when drilling.



Step 6

Reassemble driver's side panels. Make sure your hardware is hanging over the top.

Raingler
NETS & GRIPS


Step 7

Loosely install the net on top mounts



Step 8

Loosely install the net on bottom by attaching to seat brackets. This will not affect your seat sliding back and forth.

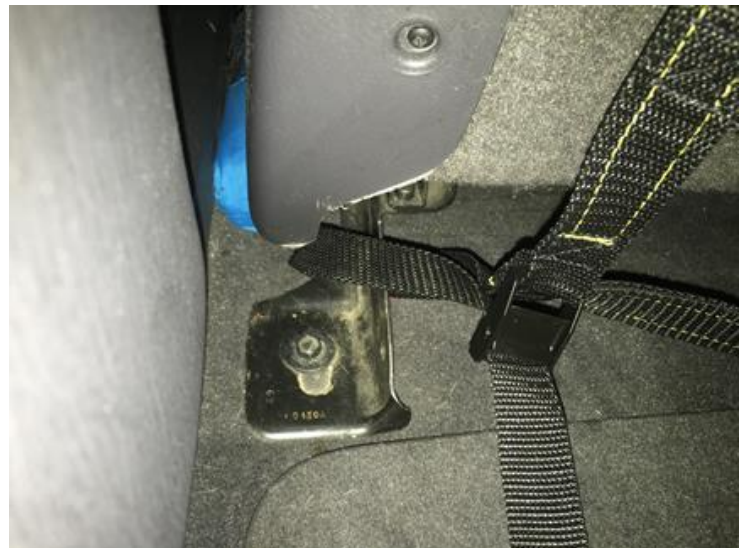

Raingler
NETS & GRIPS



Step 9

Do a final adjusting and checking seat positioning and wrap and tuck all excess ends. To see how to wrap and tuck up the excess strap visit our Raingler channel.

<https://vimeo.com/raingler>

Check out the video here on YouTube:

<https://vimeo.com/raingler>

Raingler
NETS & GRIPS

Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!