

Raingler

NETS & GRIPS

How to Shorten Mount Straps on Steel Ring Mount Points

Used to shorten the distance needed for a cargo net and raise a vertical barrier divider net
This process can remove up to about 3" of distance for each mount point.

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: 5-10 minutes



Paw Level:

Step 1

Footman mount at end of D ring strap is about 5-6" from steel (PVC coated) ring




Step 2

Release strap from cam buckle and pull from d ring strap



Step 3

Bring tapered end of strap behind back, flat-side of buckle and into the steel ring opening and out through the front side of net.

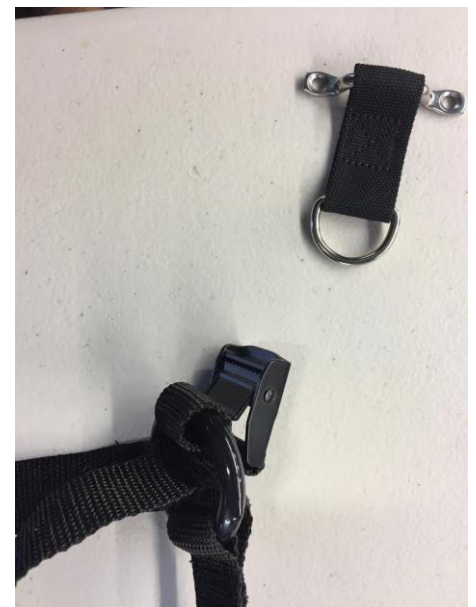

Raingler
NETS & GRIPS

Step 4

Feed tapered end of strap back through the d ring and then back into radius side of cam buckle. Pull to desired new, shorter length.



Step 5

Feed excess strap through steel ring and can wrap and tuck end as desired.

Here we have run the extra strap length backing the d ring.



Step 6. Continue to wrap until all strap is retrained. Last bit of tapered strap is folded back and tucked back under the d ring here so that the strap can be loosened and removed as needed easily.

Check out the video here:

<https://vimeo.com/raingler>

Raingler
NETS & GRIPS

Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!

