

Crawford Performance Overland Series Mirror Light Pod Bracket 2018+ Crosstrek

B2260-1 Parts List

Part Number	Quantity	Description
B2260	2	Bracket – 18+ Crosstrek Mirror Light Pod Bracket
B0261	2	Bolt — Light pod bracket mounting bolt
B0410	2	Spacer – Bracket Standoff
T2260	16"	Tape – Double sided tape for weatherstripping



Hardware:



Tools Needed:

10 MM Socket

8 MM Allen Wrench

3/8" Ratchet








Installation Difficulty: 2/10

Installation Instructions


1. Remove Plastic cover from door frame. Repeated for both sides.

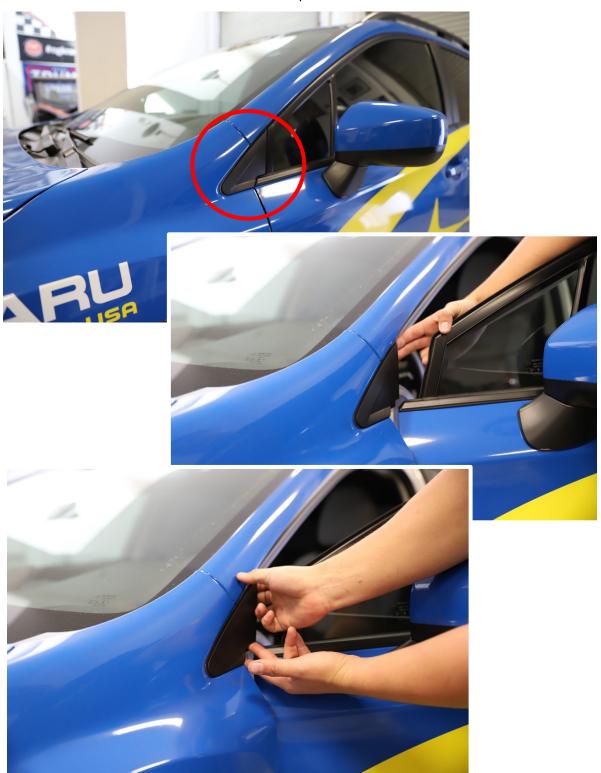



2. Remove 10 MM bolt as shown (10 MM socket) Repeated for both sides.



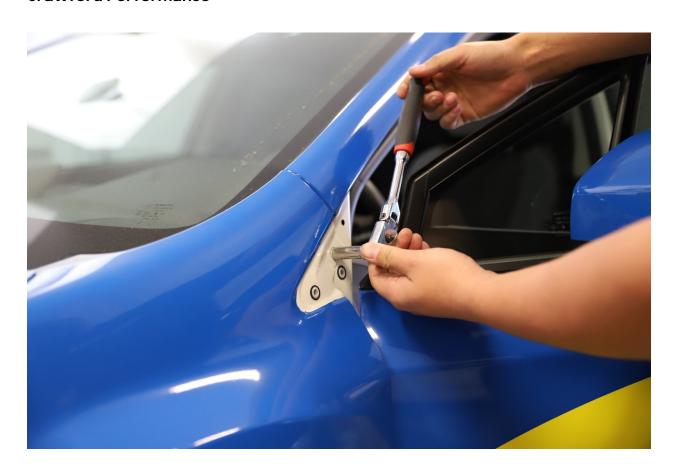



3. Prepare both brackets for mounting by installing the factory weather-strips from the plastic covers removed in step 1 to the Crawford mirror pod bracket. Use the provided double sided tape to reinstall the rubber weather-stripping









4. Finish bracket prep, by inserting provided button head allen wrench into the upper hole position. Leave the lower hole empty, this will be used to route the pod wire into the car. Slide provided spacer on to allen bolt extruding from the bracket. Spacer should be positioned to the inside of the vehicle.




5. Mount bracket on to vehicle. Leave lower hole open for wiring (8 MM allen wrench). Tighten with 8 MM allen wrench and adjust bracket for correct orientation as you tighten





6. Complete set up with desired light pod and wiring set up. Make sure bracket is secured to vehicle. We Recommend keeping any OEM parts removed just in case this install needs to be undone.

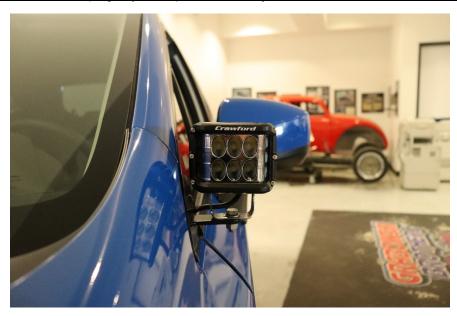

Thank you for choosing Crawford Performance!

Please feel free to contact us for any questions or comments! We are here to help. We understand this is a difficult install and we commend you for your efforts. Celebrate by cracking a beer and pouring one out for your chewed-up arms.

2319 E Locust Ct. Suite A Ontario, California 91761

Technical@crawfordperformance.com

(855) 677-8243

Crawford Performance