



Crawford Performance Overland Series
Rock Sliders
2018+ Crosstrek

B2230-1 Parts List

Part Number	Quantity	Description
B2230	1	CDR Series Rock Slider – 2018+ Crosstrek
S2230	2	Spacer – Aluminum spacer rear mount
B2200	2	Bolt – M14-1.5 x 200 MM Flange Bolt, Zinc, Silver
B2239	4	Bumpstop – 1” Tall Buttonhead stop



Crawford Performance

Hardware:



Tools Needed:

19 MM Socket

9/16" Socket

1/2" Ratchet



Installation Instructions

Crawford Performance recommends all steps and procedures described in these instructions be performed while the vehicle is properly supported on a two-post vehicle lift with safety jacks.


Otherwise, park vehicle on a clean flat surface and block the front wheels for safety. Engage the parking brake.

1. Remove front subframe bolt just behind the front tire. (19 MM socket).



Crawford Performance

2. Remove rear subframe bolt just behind the rear tire. (19 MM socket)

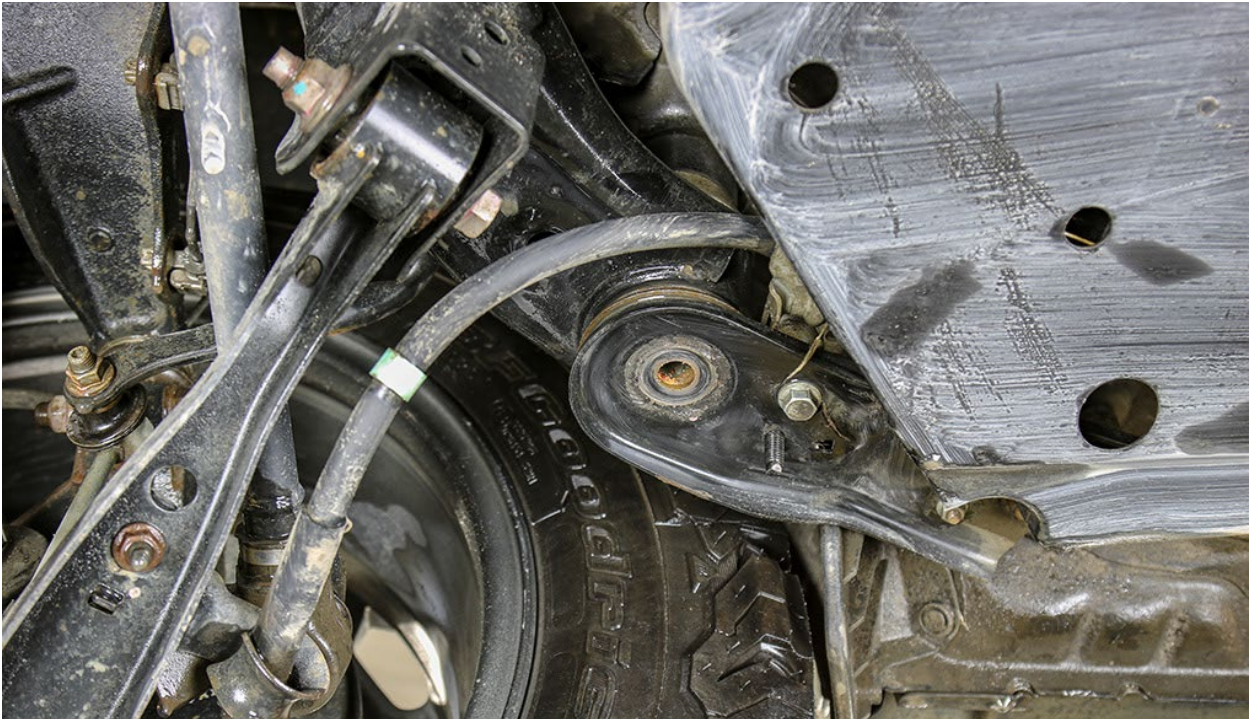

Crawford Performance

3. Locate and install the sub frame bump pads onto the rock guards. There will be 4 bump pads total, and two go on each guard. Use a 9/16" socket to tighten the pad onto the guard tabs as shown below.



Crawford Performance

4. Install front end of rock guard mount to sub frame using OEM bolt removed in step one. (19 MM socket)



5. Install rear rock guard mount with spacer between guard mount and subframe. Use the provided 19 mm bolt to secure guard. (19 MM socket)



Crawford Performance

6. Tighten subframe bolts and make sure the guards are completely secure to the vehicle.



**Thank you for choosing Crawford
Performance!**

**Please feel free to contact us for any
questions or comments! We are here to
help. We understand this is a difficult install
and we commend you for your efforts.
Celebrate by cracking a beer and pouring
one out for your chewed-up arms.**

**2319 E Locust Ct. Suite A
Ontario, California 91761**

Technical@crawfordperformance.com

(855) 677-8243

