

MADRID


MADRID ACACIA BED (QUEEN) B1038Q



ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Ensure that you have all the Pieces before starting assembly by referring to the parts inventory. When starting assembly, Place all pieces on a soft, clean, and flat surface like a carpet to prevent scratches or damage.

If you are having difficulty, our VIP Team is always here for you. Call us at **1-800-684-6014**During business hours or email us at **service@wazofurniture.com**.

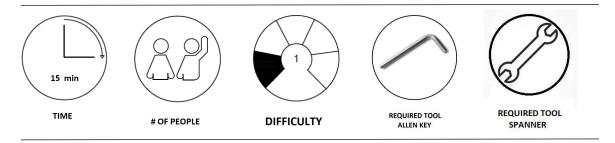


PARTS INVENTORY			
ID	DESCRIPTION	QTY	
A	HEADBOARD	1	
B	TAILBOARD	1	
0	WOOD LEG SUPPORT	4	
D	WOOD MIDDLE SUPPORT	2	
3	SIDE RAIL	2	
•	SLATES	11	
G	IRON LEGS	2	



IMPORTANT NOTES

- 1. Please check that all parts are present before starting assembly.
- 2. For the protection of your furniture and to ensure it is not damaged in the assembly process, place all parts on a clean, smooth surface.
- In order to align all screws properly, tighten all screws halfway first until product frame is assembled and then tighten fully when all screws are aligned.
- 4. Do not use power tools for assembly.
- 5. Please periodically check all fittings and re-tighten as necessary.
- 6. Do not use furniture unless all bolts and screws are firmly secured.






HARDWARE / TOOLS INVENTORY			
ID	DESCRIPTION		QTY
A	SPANNER 12X13	== 3	1
B	BED BOLT 8X20	8	8
0	ALLEN KEY BOLT 6X70	Ī	4
0	ALLEN KEY 4MM		1
•	ALLEN KEY 5MM		1
•	WASHER 6MM	0	4
G	ALLEN KEY BOLT 8X12	Ť	8



1

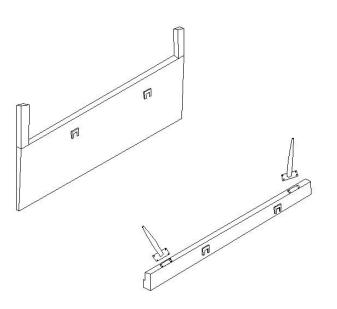

2

