



3-PIECE BUMPER INSTALLATION

These instructions are to assist you when installing your three piece bumper. While they are not vehicle specific, they will help you understand the process of installing DV8's 3-piece truck bumpers.


1. Begin by opening all boxes and removing all pieces. Be sure to check the foam for hidden parts and hardware.
2. All bumpers will come with a main center section and two wings. If your center section does not have a winch plate incorporated into it, then you will have a separate winch plate. Below is an example of a 3 piece bumper and its contents.

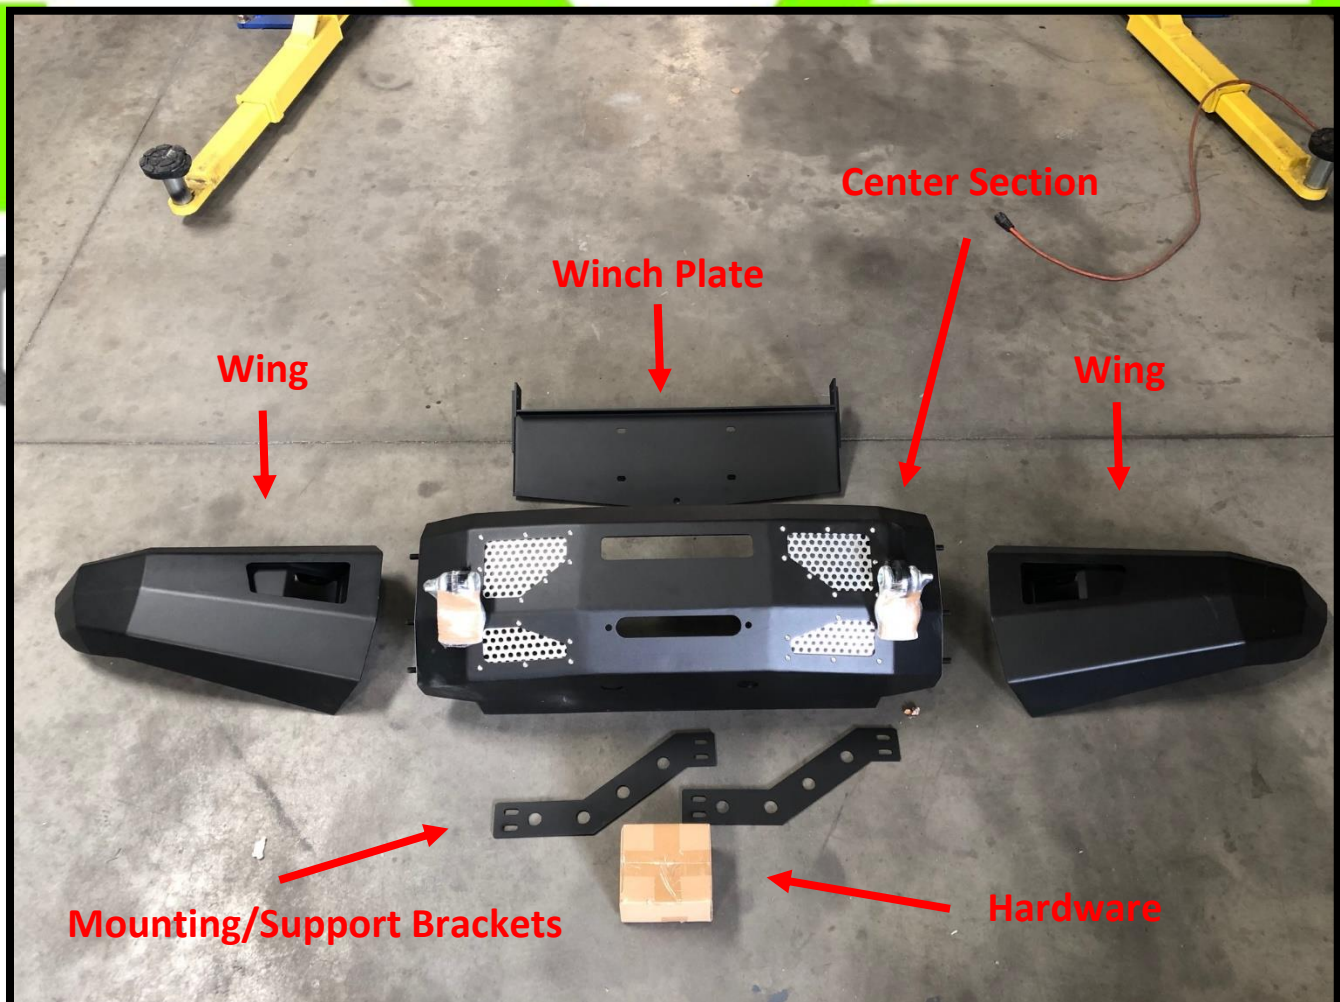

3. If your bumper has a detached winch plate, this will mount to the frame of the vehicle prior to mounting the center section. Examples below.

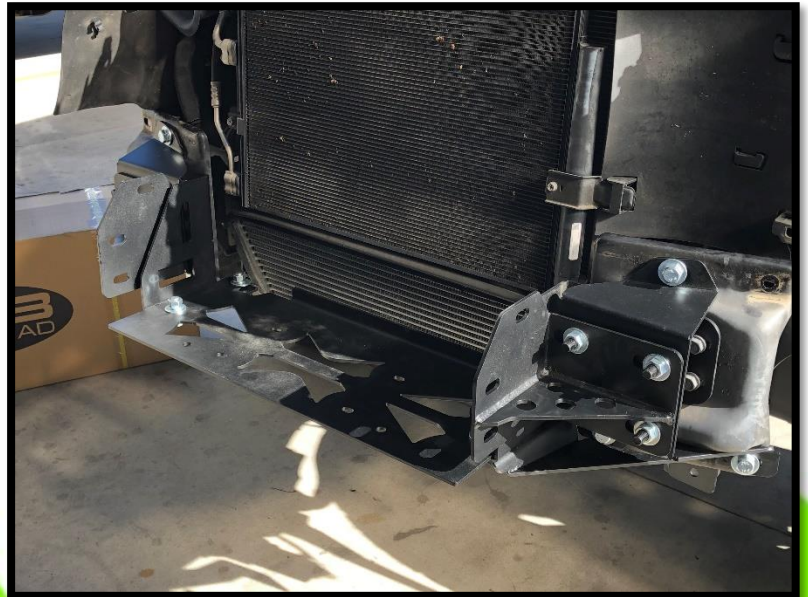

4. Begin by mounting the bracket/winch plate onto the frame of the truck. Most bumpers will utilize factory installation hardware for this. Then mount the center section to winch plate. Be sure to leave all hardware loose. **Note: If installing winch, install it now.**

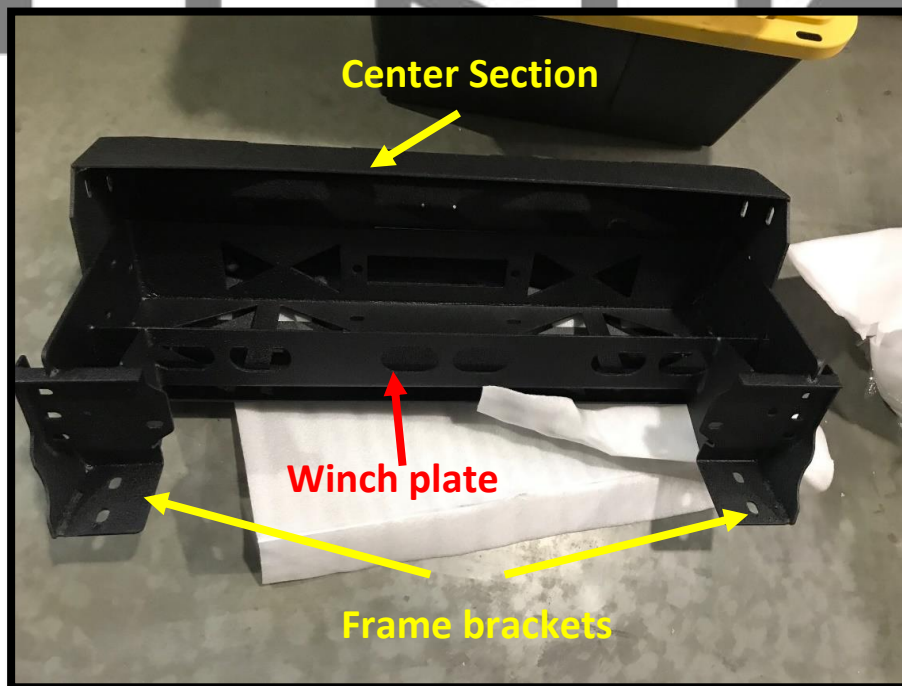

5. Once center section is on, attach wings using supplied hardware. If the studs for the wings are welded on to the center section, use flat washers, split lock washers, and the correct nuts. If not, use the short thick bolts M10/M12 along with the same washers to attach wings. Leave loose until final steps. **Note: If your wings allow lights, install them prior to placing on wings.**



6. Once all pieces are on, with help, align the bumper with body lines and starting with the frame mounted pieces, tighten all components.



If you have any questions for your specific bumper, please contact us at infor@dv8offroad.com or 951-680-9595