


DV8 OFFROAD ENGINE BAY AIR COMPRESSOR MOUNT (CMJL-01)


1. Begin by removing all items from packaging. Inspect them prior to installation.
2. Remove driver side wheel well.
3. Using a plastic fastener tool, remove the pins holding wiring to the shown holes.



4. Secure wires out of the way.
5. Using supplied hardware, bolt in your new air compressor mount. **NOTE: Depending on the compressor, you will want to mount the compressor onto the mount prior to installation.**

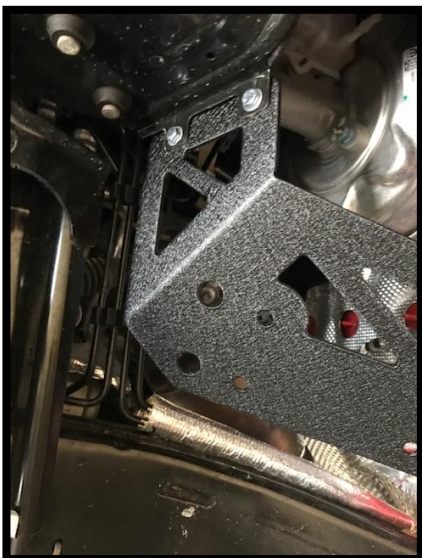

6. Due to location of the compressor, we recommend running a line and nozzle to an easy to access location.
7. Reinstall the inner fender.

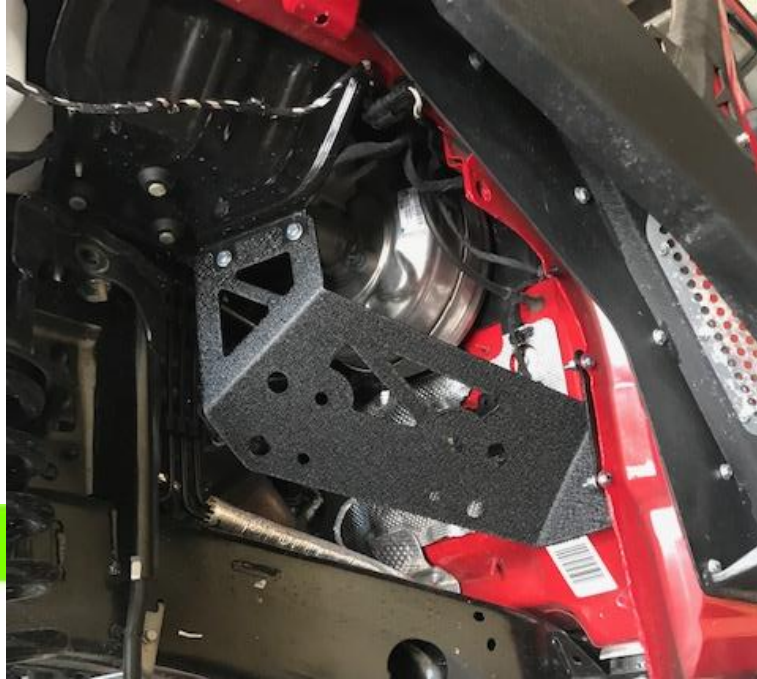

If you have any questions please reach out to us at
info@dv8offroad.com or 951-680-9595

OFFROAD