



6400 Sycamore Canyon Blvd.  
Riverside, California 92507  
855-680-9595  
www.DV8OFFROAD.COM

PRODUCT

# INSTALLATION MANUAL

## 4 RUNNER DASH MOUNT

2010+ (5TH GEN) TOYOTA 4RUNNER

DMT3-01



### TOOLS REQUIRED

- Drill
- 3mm, 4mm Allen Bit
- 10mm Wrench
- 10mm Socket
- Trim Clip Tool
- 11/32" Drill Bit

### SKILL LEVEL

- Novice/Intermediate
  - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

### WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



NEED HELP?




855-680-9595

# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

## HARDWARE INCLUDED

(2) M6x15 Allen	(2) M5x10
(2) M6x30 Allen	(2) M5 Flat Washers
(4) M6 Flat Washers	
(4) M6 Nylon Lock Nuts	

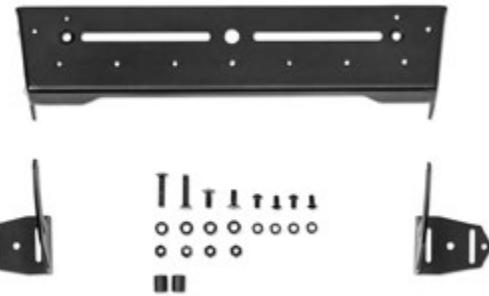


**STEP 1** | Remove the side trim pieces by pulling towards the rear of the vehicle. These can be a little difficult to remove.

Use a trim clip to apply pressure to the clips behind the trim, while pulling on it, if necessary.



**STEP 2** | Remove the control cluster by pulling towards the rear of the vehicle to release the clips, and disconnect the wiring connector on the back.

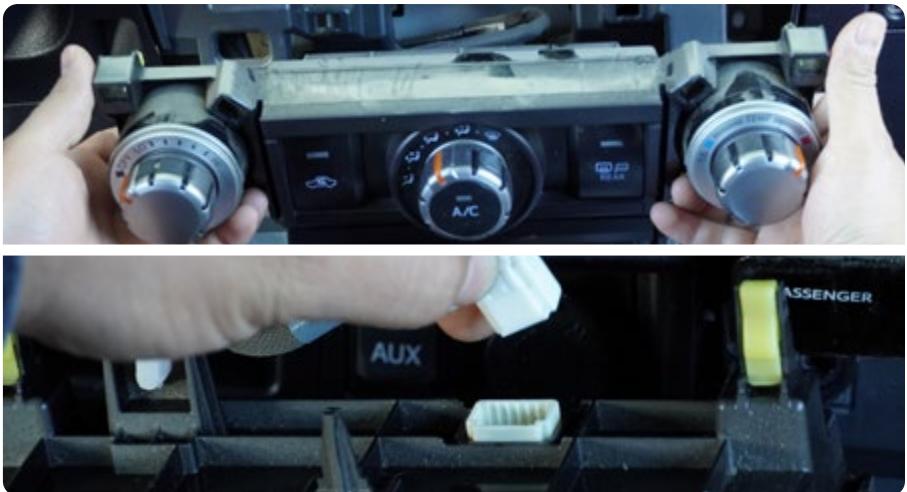

# INSTALLATION MANUAL

---

**STEP 3 |** Slide the two M6x30 bolts through the dash mount and place it in the desired install location.


When it is adjusted as desired, use a 4mm allen bit to spin the bolts so they make marks on the dash for drilling.

Use a sharpie to mark the side mounting holes for drilling.



# INSTALLATION MANUAL

**STEP 4 |** Remove the dash piece to prepare for drilling by removing the four bolts securing it using a 10mm socket.

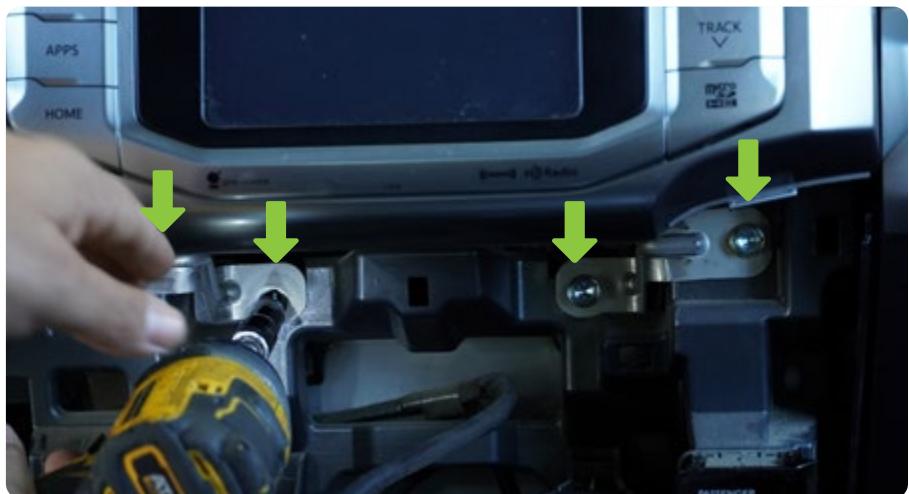


**STEP 5 |** Drill out the marked holes using an 11/32" drill bit.



**STEP 6 |** Install the dash mount onto the dash piece using the provided M6 hardware with a 4mm allen bit and 10mm wrench.

The longer M6x30 hardware will be used for the top mounts and the shorter M6x15 hardware will be used to secure the sides.

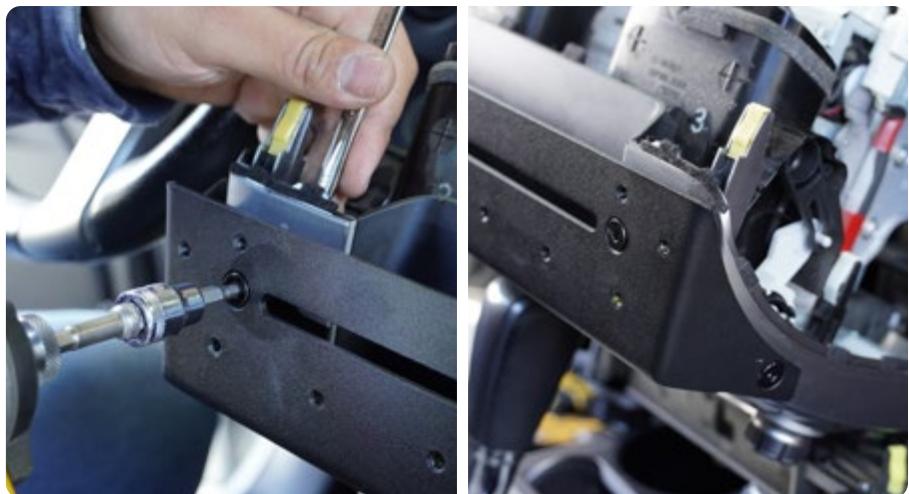

# INSTALLATION MANUAL

**STEP 7 |** Re-install the top dash piece using a 10mm socket and factory hardware.



**STEP 8 |** Install the control cluster and dash trim by applying pressure until the clips are secured.



# INSTALLATION MANUAL

---

**STEP 9 |** If desired, install the arms onto the dash mount using the provided M5 hardware and a 3mm allen bit.



**STEP 10 |** Congrats! You are finished with the install of the 2010+ (5th Gen) Toyota 4Runner Dash Mount!

