

DV8 Offroad Modular Front Bumper (FBJL-10)


1. Begin by removing your factory bumper, fog lights, skid plate and wiring from front of the frame.
2. Place the winch plate on the inside of the frame rails and using supplied hardware, bolt winch plate to inside of frame. Be sure to leave all hardware loose at this time.



3. Place bumper mounting brackets over frame rails noting orientation of the triangles on each side. **NOTE:** If you are using the factory Jeep tow hooks, place them on the back side of the frame plate with the studs facing away from the Jeep (green arrow in image on step 2. Use Studs with nuts to secure brackets to frame)



4. Prior to placing bumper on brackets, install fog light adapters and fog lights at this time. This bumper only accepts fog lights with the 4 mounting holes.

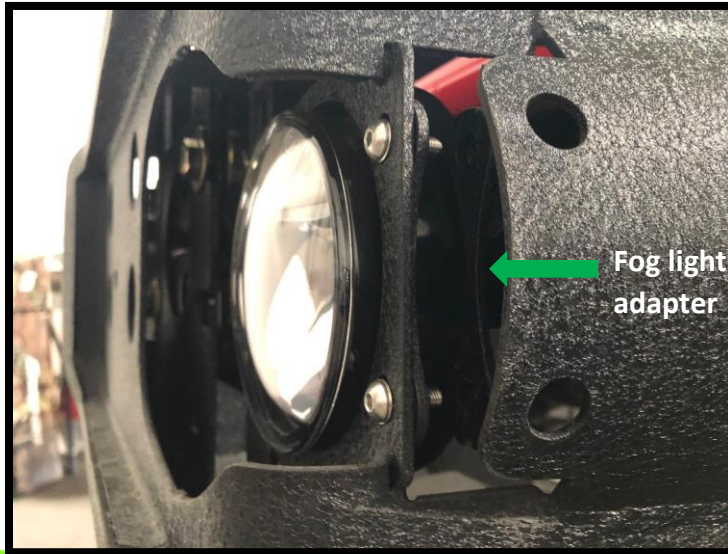

5. Install winch onto winch plate at this time, if not proceed to placing bumper over brackets and secure with supplied hardware (16 large bolts). Tighten all winch plate and bracket hardware at this time.



6. Install light covers over fog light holes using supplied bolts.



7. Install bull bar and winch plate cover if no winch used.



Please email us at info@dv8offroad.com or call us at 951-680-9595 if you have any questions.