


4RUNNER REAR WINDOW INTERIOR MOLLE PANEL 2010+ (5TH GEN) TOYOTA 4RUNNER MPT3-01

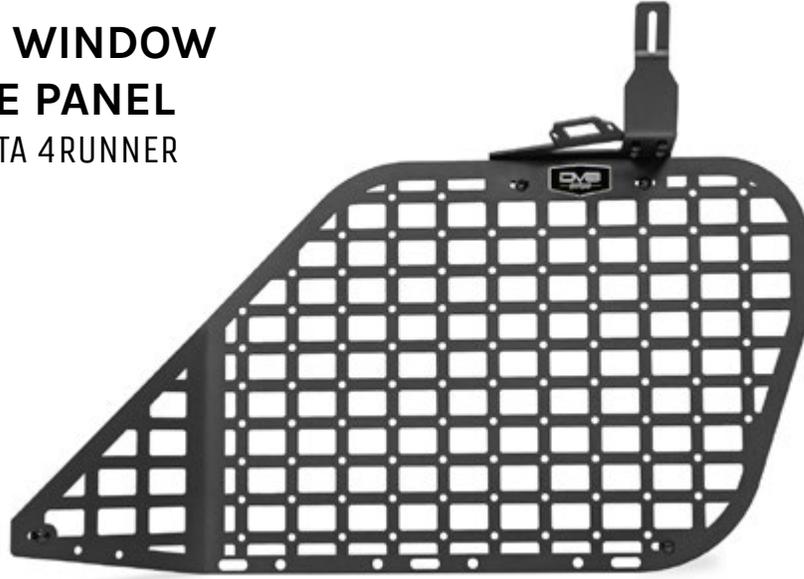

TOOLS REQUIRED

- 4mm Allen Bit
- 10mm Wrench
- 10mm Socket
- Trim Clip Tool
- Philips Head Screwdriver

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours
- Time to install this should only take about an hour and a half

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

HARDWARE INCLUDED

- (12) M6x20 Allen
- (4) M6X25 Allen Head
- (16) M6 Nylon Lock Nuts
- (32) M6 Flat Washers
- (4) Aluminum Spacers

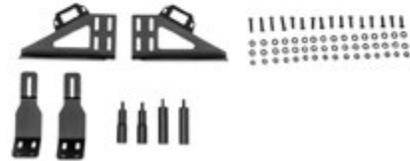

STEP 1 | Install the upper mounting bracket to the molle panel using the provided M6 hardware with a 4mm allen bit and 10mm wrench.

Pictured is the installation of the passenger side molle panel.



INSTALLATION MANUAL

STEP 2 | Install the larger “L” shaped bracket onto the upper mounting bracket using the provided M6 hardware with a 4mm allen bit and 10mm wrench.



STEP 3 | Use a trim clip tool to remove the cover of the plastic hanger.

Use a 10mm socket to remove the bolt and hanger.



INSTALLATION MANUAL


STEP 4 | Use a trim clip tool to remove the plastic cover located underneath the rear window.

Use a 10mm socket to remove the bolt located behind the cover.



STEP 5 | Remove the plastic tie down next to the rear lift gate door by turning it to unlock, and pulling it out.

Remove the screw behind the plastic tie down with a phillips head screwdriver.

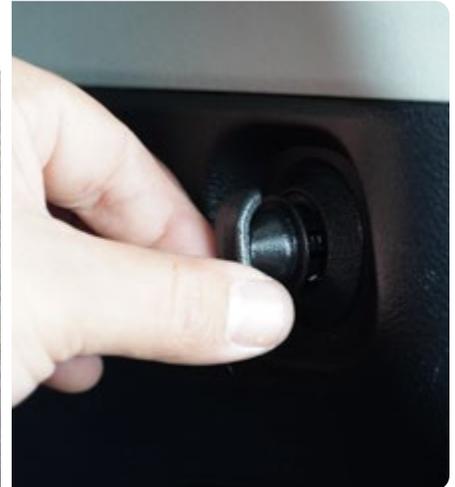

INSTALLATION MANUAL

STEP 6 | Install the aluminum spacers and secure tightly by hand.

The stepped spacer will be used in the rearmost (closest to the rear of the vehicle) factory mounting location.



STEP 7 | Begin installing molle panel by securing it to the factory mounting location above the rear window using the factory bolt and a 10mm socket.



INSTALLATION MANUAL

STEP 8 | Secure the molle panel to the aluminum spacers using the provided M6 hardware and a 4mm allen bit.



STEP 9 | Congrats! You are finished with the install of the 2010+ (5th Gen) Toyota 4Runner Rear Window Interior Molle Panel

