

Frit-Casted Zinnia

Creative Paradise Inc.

Materials you will need:

- Creative Paradise, Inc. [LF153 Zinnia Mold](#).
- Zyp Glass Separator Spray.
- COE90 Powder and Fine Frits.
- Pippet/small tool to apply frit in small areas.
- Powder Sifter.
- Respirator Mask when using Powder frits.



Step 1. Spray your mold with a suitable glass separator such as Zyp.




Step 2. Using a pippet to put some Fine Ruby Pink Tint into the middle of the Zinnia.




Step 3. Place some Powder Canary Yellow around the Ruby Pink Tint.




Step 4. Use a powder sifter to sift Powder Light Sky Blue around the Canary Yellow. Start at the edges and work your way inwards.

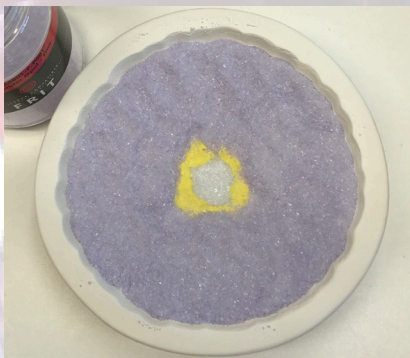

Step 5. On top of the Light Sky Blue fill the mold with Fine Neo Lavender Opal.

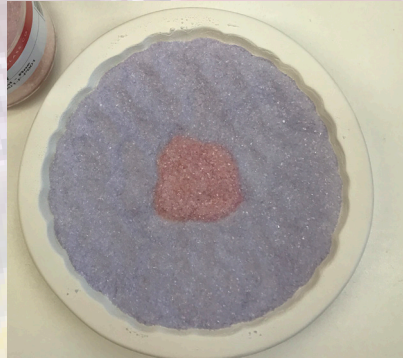

Step 6. On top of the Ruby Pink Tint in the middle place some Fine Pink Opal.

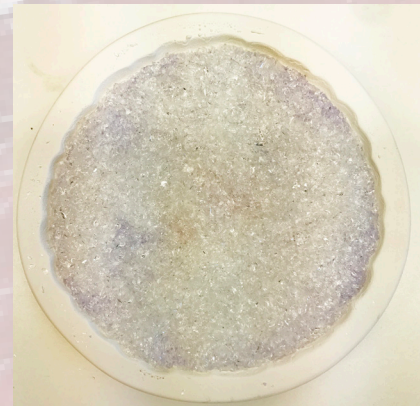

Step 7. Cover the rest of the frit with Medium Clear until your mold holds 256 grams of frit.

Step 8. Fire your mold using the schedule in table 1.

**Before firing please refer to our important firing notes by [clicking here](#).*

Table 1.* Fuse Schedule

Segment	Rate	Temp	Hold
1	275	1215	30
2	50	1250	30
3	275	1465	10
4	9999	950	60

If you want to slump your Zinnia, using the mold of your choice, follow the instructions found in the Hibiscus tutorial by [clicking here](#).

For more visit:

www.creativeparadiseglass.com