

JDC EVO 8/9 BUMPER QUICK RELEASE INSTALLATION INSTRUCTIONS (CORE SUPPORT ONLY)

Step 1:

Start by removing your front bumper. Most Evo owners have had their bumper off before, so we will not be including this in our instructions.

Step 2:

Locate the two bolts that screw into the rubber grommet on the A/C condenser and remove them. They're located right above the plastic tab on the headlight.

Step 3:


Mount each bracket to the frame using the included 25mm bolt and washer. You will use the hole where the A/C condenser bolts were removed. The brackets will mount to the frame using the single hole in the bracket, not the slotted hole. Each bracket will point into the center of the car when installed correctly.

Step 4:

Mount the ball pins to the brackets with the supplied nuts and washers. The ball pin should be pointing up. The pins should be in the center of the slotted hole for now.

Step 5:

Locate the driver side drill spot. You can also use the latch to gauge where the hole needs to be drilled. Center it between the edge of the bumper and the ledge on the left side (see picture below).

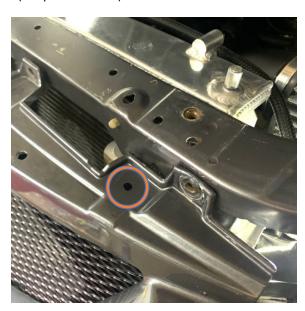

Step 6:

Start by drilling a small hole in the marked spot big enough for the ball pin to come through. Once the small hole is drilled, make sure it lines up with the ball pin before drilling the larger hole.



Step 7:

If the small hole lines up with the ball pin correctly, proceed to drill the $\frac{3}{4}$ " hole for the latch. A step bit is the best option for drilling the correct size hole.



Step 8:

Install the latch in the ¾" hole and secure it from the bottom with the provided nut. Make sure to tighten it enough for it to not come loose from vibrations.



Step 9:

Repeat the same steps on the passenger side of the car. The mounting hole is in the same area as the driver side (see picture below).



Step 10:

Drill a small hole and make sure the ball pin aligns with the small hole first.



Step 11:

Drill the ¾" hole and install the latch.



Step 12:

Make the final adjustments to the ball pin using the slot to pull the latch closer or farther away from the frame so the bumper is flush against the frame once installed. You can choose to leave the plastic alignment pins on the bumper or cut them off to make it easier to remove and install the bumper. That's it! Enjoy your new quick release bumper from JD Customs USA!