

INSTALLATION INSTRUCTIONS

progetto
DESIGN COLLECTION

COMO ROUND SLIDE SHOWER | C309RD

COMO SQUARE SLIDE SHOWER | C309SQ



IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:


Plumbline

T 04 568 9898 E sales@plumblin.co.nz
www.plumblin.co.nz

RECOMMENDATIONS FOR INSTALLATION




ATTENTION: Failure to follow these recommendations may void the warranty.
It is recommended that a qualified, licensed tradesperson install this product.

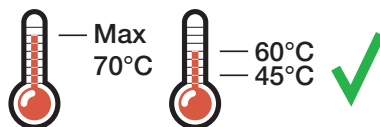

Water Pressure: 3 bar


Product performance cannot be guaranteed if pressure is less than 1 bar. Above 5 bar a pressure regulator must be installed. Failure to do so voids the product warranty.

Water Temperature: 45°-65°C

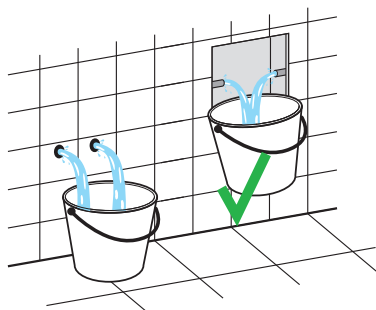


Pre-Flush

Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.

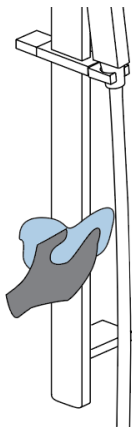


Cleaning

Clean with warm soapy water and a smooth cloth e.g. microfibre cloth. Avoid abrasive sponges or detergents as these will damage the finish.

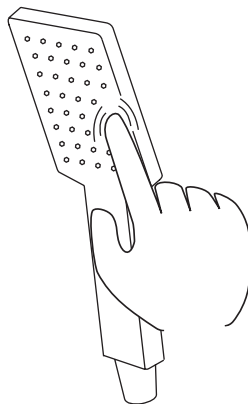

Nozzle Maintenance

To remove calcium/lime build-up on the handpiece nozzles, periodically clean them by flicking them with your finger as shown.

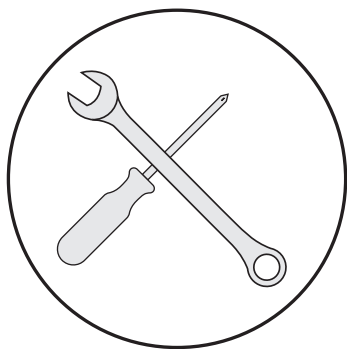

Warranty Information


For full details about our warranty visit
plumblinc.co.nz/warranty-information

INSTALLATION INSTRUCTIONS




ATTENTION: Prior to installation remove all parts from the packaging and inspect all parts for any freight damage.


- 1 Before the wall lining has been installed, choose the position of the wall coupling. Position the 1/2 inch male wing back in the wall accordingly, ensuring that it is firmly fixed in place.

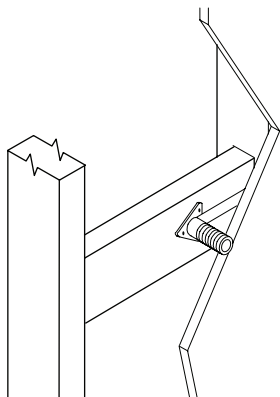


- 2 Ensure that there is sufficient framing inside the wall to fix the slide shower mount brackets to.

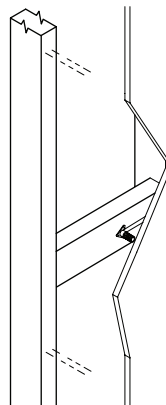

- 3 Mark out the fixings, use a level to check that they are plumb.




- 4 Fix the mounting brackets in place, ensure the groove is facing away from the centre of the rail.

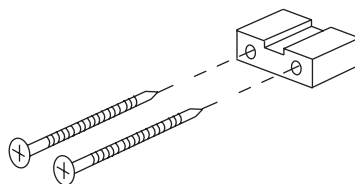

INSTALLATION INSTRUCTIONS

progetto


- 5 Push the slide rail onto the brackets and tighten the locking grub screw into the groove of each bracket. Do not over tighten!

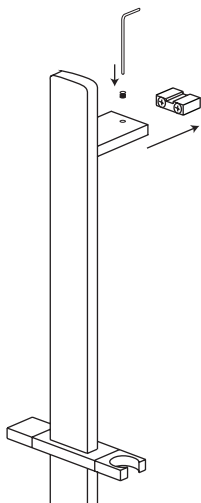


- 6 Apply thread sealant to the male threaded wall fitting (wingback).




- 7 Screw the wall coupling in place.

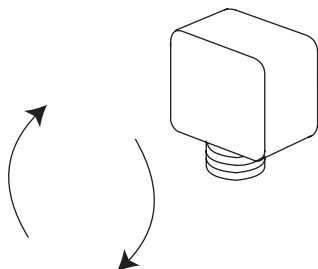

- 8 Finally, connect up the hose and handpiece.

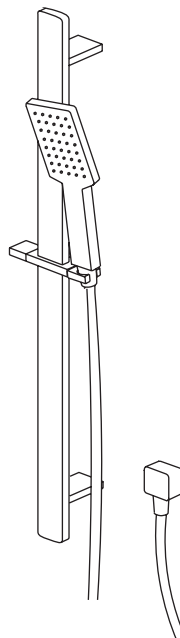

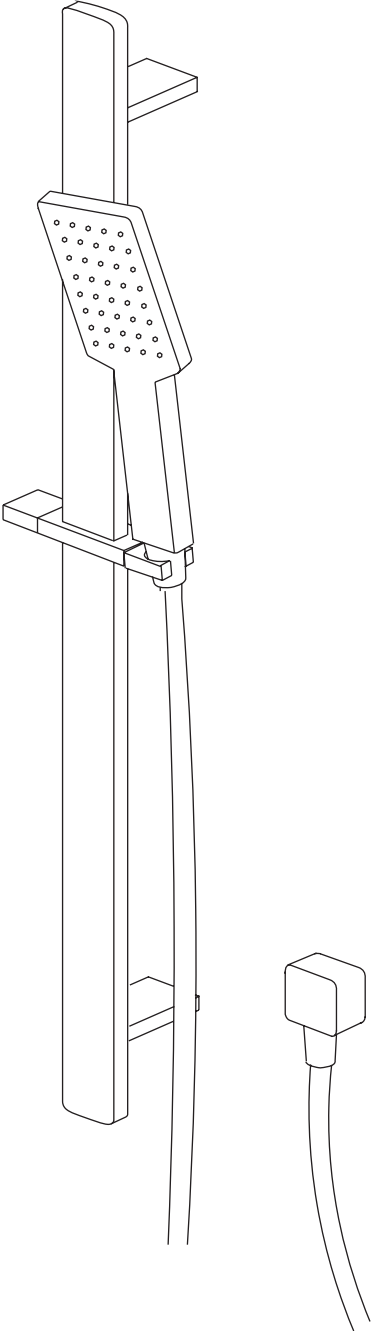



IMPORTANT!

Once Installed, test for for leaks and performance

For any questions or comments please contact us

Distributed by:

Plumblīne

T 04 568 9898 **E** sales@plumblīne.co.nz
www.plumblīne.co.nz