


IMPORTANT INSTALLATION NOTE:

TEMPORARILY REMOVE THE EXISTING "LEAF STRAINER" AND CLAMPING RING PRIOR TO THE APPLICATION OF NEW PRIMER AND PRO-TACK MEMBRANE. REINSTALL CLAMPING RING AND STRAINER PRIOR TO THE APPLICATION OF APOC #525 ARMORFLEX.

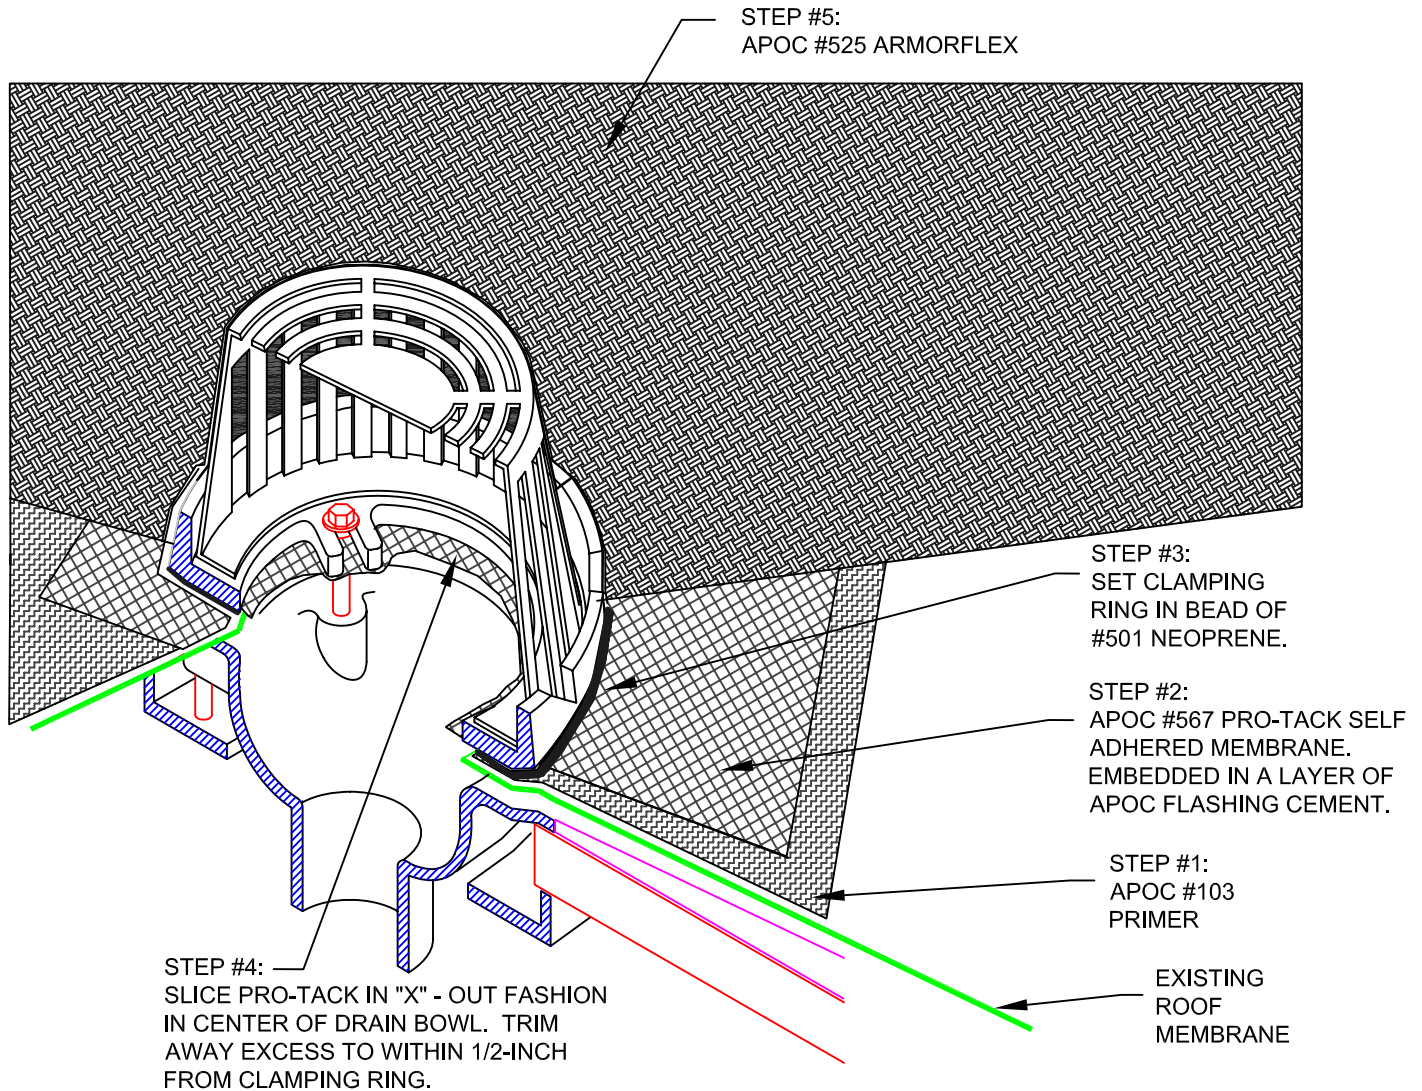

APOC NOTES:

1. FOLLOW APOC - ARMORFLEX ROOF RESTORATION SPECIFICATION GUIDELINES.
2. FOLLOW APOC MATERIAL PREPARATION AND APPLICATION RATES, INCLUDING ARMORFLEX #525 SURFACING COMPOUND AND APPROVED TOP SURFACING OPTIONS.

ROOF DRAIN FLASHING RESTORATION

ARM-7

NOT DRAWN TO SCALE