


Exposed Fasteners

#567 Pro-Tack SBS self adhered membrane

Concrete parapet

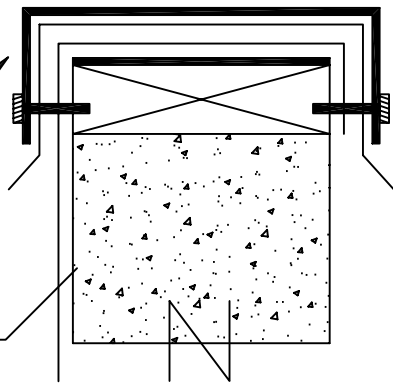

Cleat

#567 Pro-Tack SBS self adhered membrane

Install cleat fastening 6" o/c with min 3/4" Drip Edge

Concrete parapet

Install metal cap with 3/4" hemmed drip edge

