


How To Measure For An Inside Mount

For more information visit our website at www.whitecottageco.com/guide

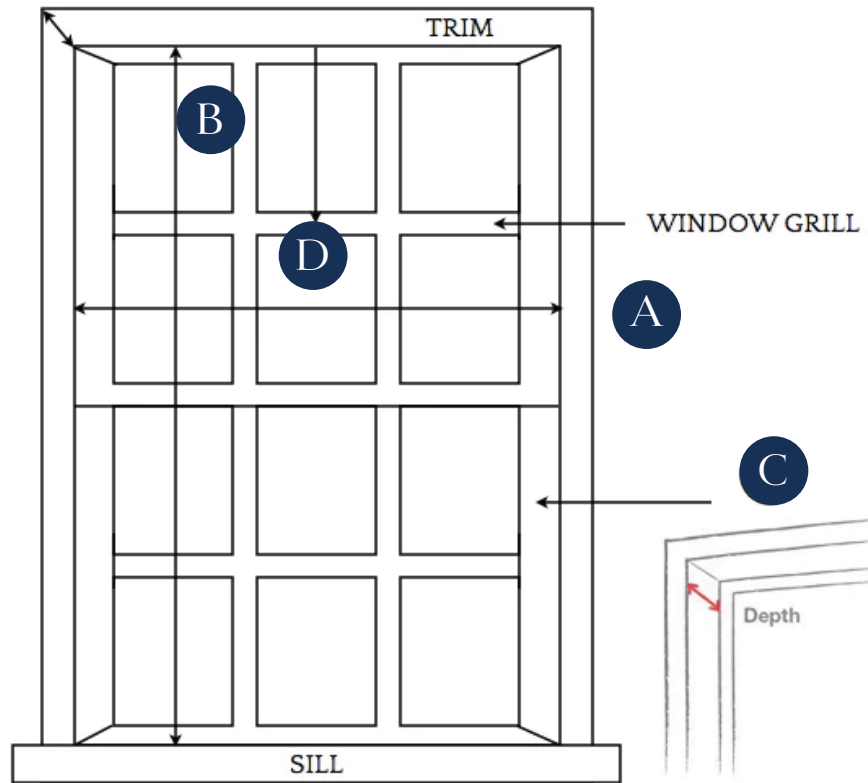

You are now ready to start measuring! Grab your metal tape measure and pencil and let's get started!

A - Measure inside trim to inside trim

B - Measure top of inside frame down to window sill

C - Measure inside depth of window frame

D - Measure vertical length you would like your shade to be. The most common measurement is down to below the first window grill or midway down the first window square if you would like more light.

*Please do not make any deductions from your length and width. We will make the necessary deductions so the shade fits properly.