


# How To Measure For An Outside Mount

For more information visit our website at [www.whitecottageco.com/guide](http://www.whitecottageco.com/guide)

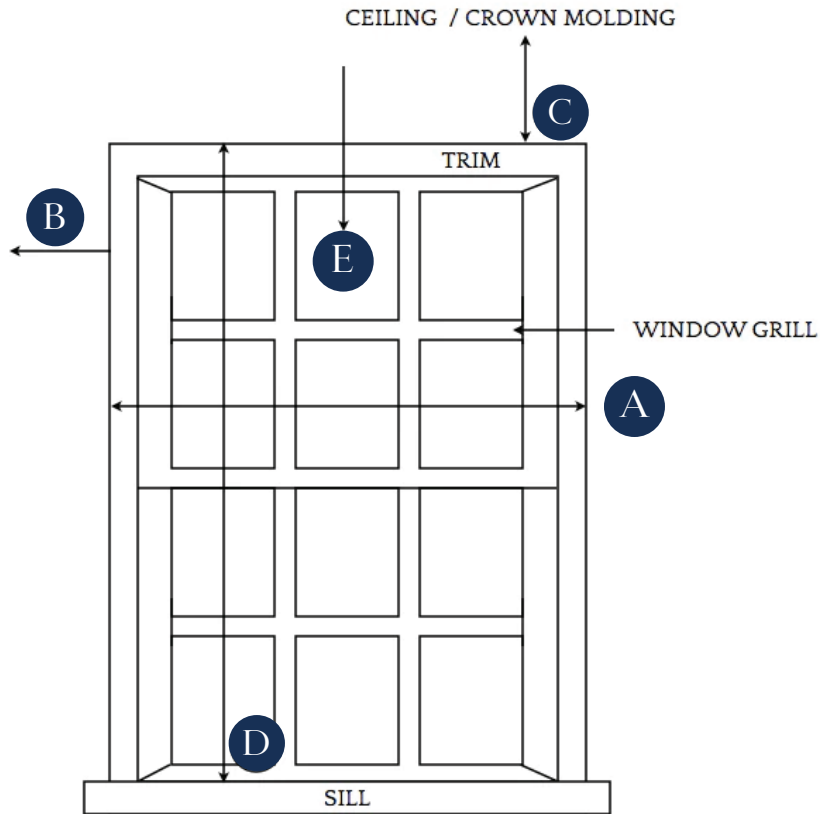

You are now ready to start measuring for your new White Cottage Roman Shade Valance! Grab your metal tape measure and pencil and let's get started!

A - Measure outside trim to outside trim

B - Measure outside trim to wall

C - Measure top of window frame to ceiling or crown molding

D - Measure top of window frame down to window sill

E - Measure vertical length you would like your shade to be. The most common measurement is down to below the first window grill or midway down the first window square if you would like more light.

**\*Please do not make any deductions from your length and width. We will make the necessary deductions so the shade fits properly.**