

# Assembling the *cannone da 90/53*



1. Glue the two legs (A) and the pedestal (B) to the base.



2. Glue the elevators (C), one each side, to the barrel assembly.




3. Slightly spread apart the rear of the gun carriage.




4. Slide the gun assembly into the slot so that the holes in the elevators line up with the pegs in the gun carriage.

**\*\* Do NOT GLUE IF YOU WANT THE BARREL TO ELEVATE AND LOWER. \*\***


Squeeze the carriage closed to hold the gun assembly firmly.

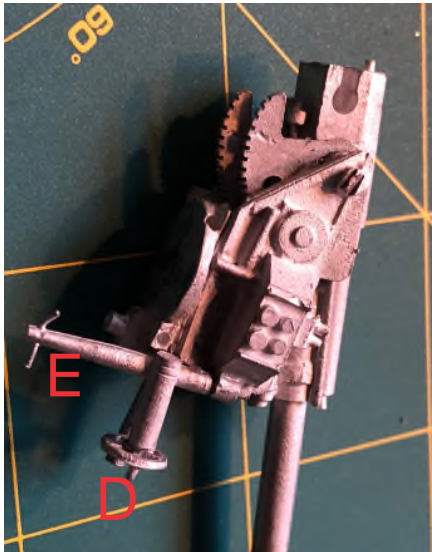

5. Glue the control wheel (D) to the elevation control (E). Glue the elevation control into the hole provided.

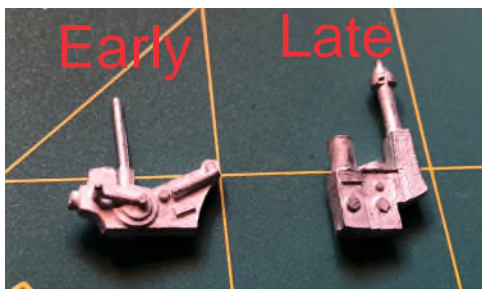

6. Choose one of the Fire Controllers

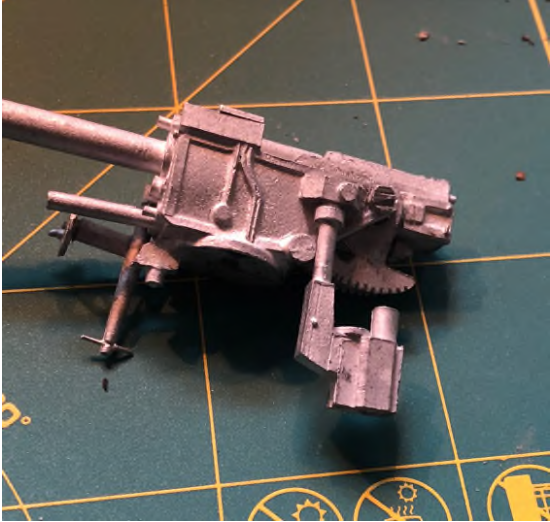

7. Glue the Fire Controller in the hole provided.



8. The seats fit the holes provided. It is advisable to paint the seats and gunners prior to attaching them to the painted gun, using the gunners on the seats to ensure proper placement.



9. The gun assembly sits on a pin on the pedestal.

**\*\* Do not glue if you want the gun to rotate. \*\***