


## Highway Pegs Mounts for 22 mm (7/8") diameter bars Installation Instructions

*Thank you for purchasing our highway pegs mounts!*

### Items included in the kit



2 Mount Arms

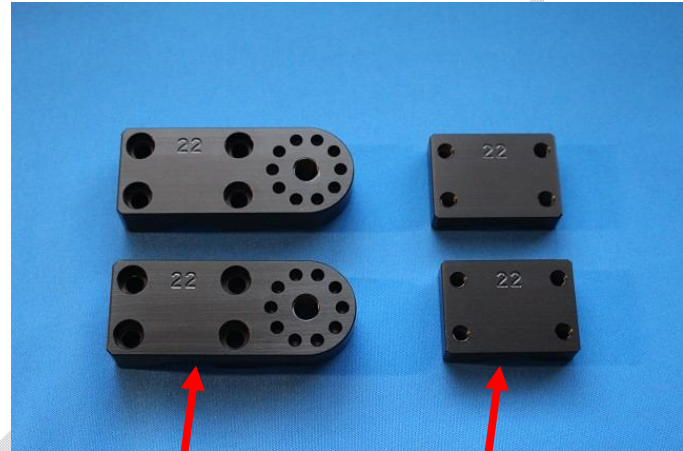

2 Front Clamps and 2 Back Clamps



Bolts and 2 Dowel Pins

### Tools needed for installation

- 5 mm Allen (hex) wrench from your motorcycle toolkit
- 6 mm Allen (hex) wrench from your motorcycle toolkit

## Installation Instructions


### Left Side

- 1) Place the **Front Clamp** on the outside side of the engine guard tube and align it to the **Back clamp**



- Using a 5 mm Allen hex wrench, attach the **socket head cap screws**, starting with the two top ones, followed by the bottom two.
- As you **lightly tighten the screws**, please ensure that the back and front clamps are **parallel** to each other.
- **Do not tighten the screws all the way at this time!**

- 2) Insert a **Dowel Pin** in one of the front clamp's holes to reach an approximate desired location. If you want to change the angle of the mount's arm, just move the pin to a different hole. Experiment with the pin location to find the most desirable position. By moving the pin from one hole to another, you can change the angle by as little as 4 degrees at the time. After you are satisfied with the angle, memorize the position of the pin, so you can do the right side mount in the **mirror image** later on, as shown in the generic example photo.

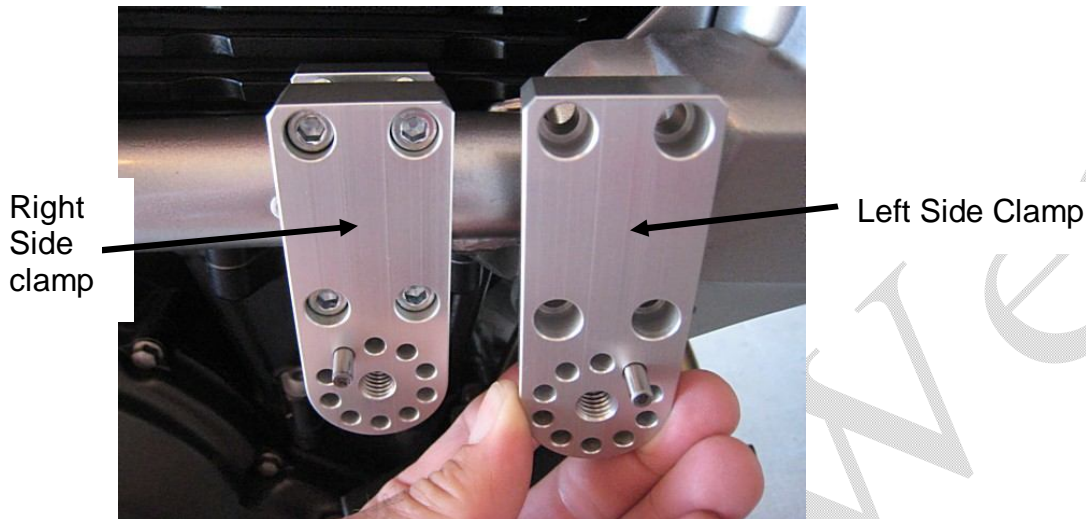

- 3) Once you have established a pin location and a desired angle of the mount's arm, attach the arm to the front clamp. Use a 6 mm Allen( hex wrench) to tighten the provided **button head screw**.



- 4) Now, tighten the top four socket head cap screws on the front and rear clamps.

## Right Side

Repeat steps 1 through 4 on the right side.

For tightening, please use an Allen hex wrench at medium strength, or if you have a torque wrench then tighten it at 25 N/m (2.5 kgf/m), (18 ft/lb). As always, we recommend that you use **Loctite Threadlocker** for the mounting screws.

Attach a highway peg of your choice to each mount. Any pegs that use a 10 mm or 3/8" mounting bolt will fit. Our mounts allow for attachment of foldable pegs.



You can use a **higher** or a **lower** attachment hole, depending on your preference. You can change the position of the mount arm forward or backward, to adjust to the length of your legs.