


Installation Instructions for the Flatfoot for Lowering Kit for 2012 Kawasaki Ninja 650

After lowering the rear and front suspension, you may also need to shorten the kickstand and install the flatfoot for lowering kit in order to maintain a safe leaning angle of your bike.

Flatfoot for Lowering Kit



In order to install the flatfoot, you will need to cut off the original kickstand leg. You may use a hacksaw, as shown below. Please **make the cut at 1-1/4"** above the top of the grip peg, as shown

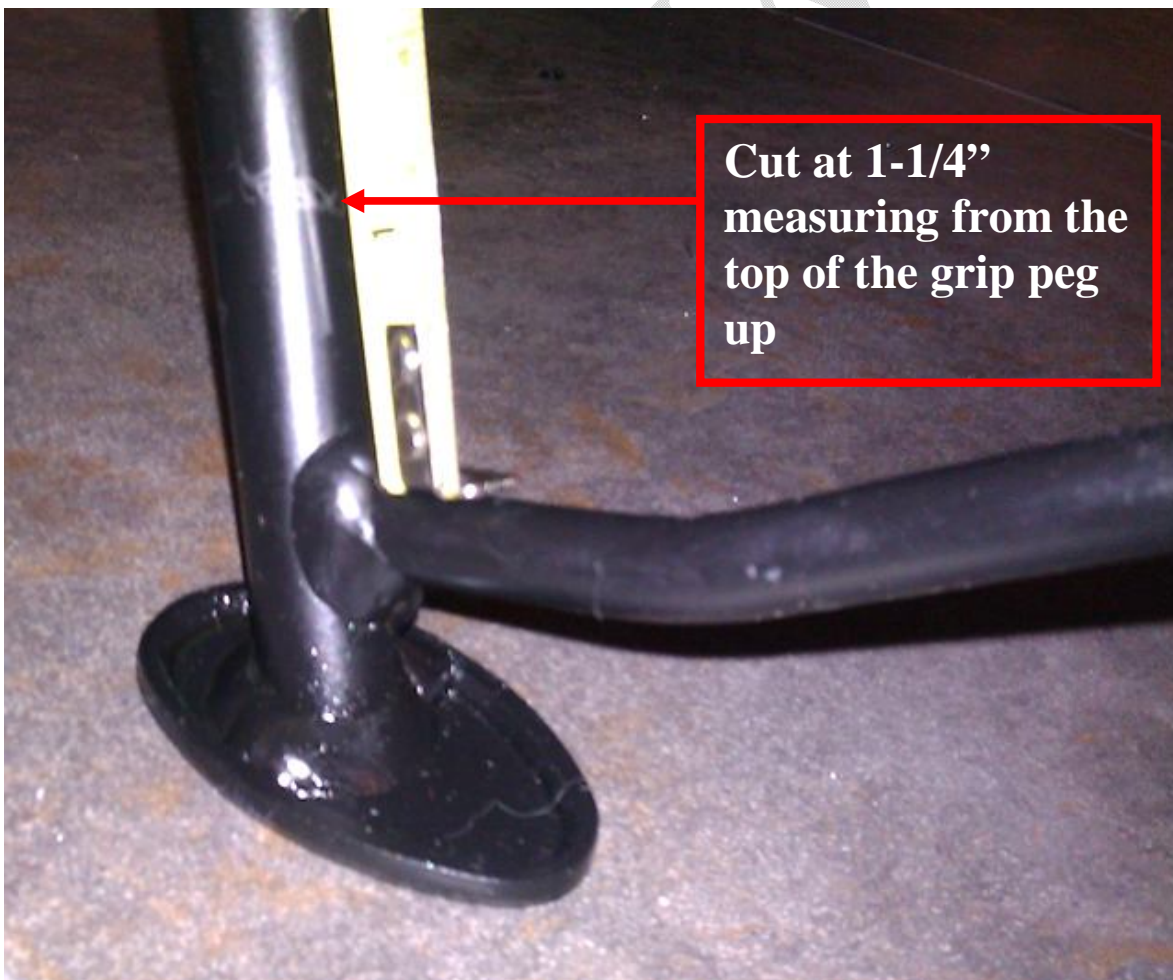

After cutting off the kickstand, please file off the sharp edge of the shortened kickstand's end, so the peg can slide easily into place.



Please tighten the 2 side screws with the 4 mm Allen hex wrench and the bottom screws with Phillips screwdriver, and remember to use Loctite Threadlocker No 242 Blue ® with the Phillips screws when installing the Flatfoot's bottom plate.



When assembling the flatfoot, please make sure that the pointy tip is aligned correctly with the top peg, as photo shows.



The installation is now completed. Thank you!

Moto Werk