## Kawasaki Versys & other models L-Bracket for Standard Flatfoot Clearance Installation Instructions

## L-Shape Bracket Kit




## Tools Needed



- Electric Drill
- 4 mm (5/32) drill bit
- From your bike's toolkit:
  - Phillips screwdriver
  - Pliers


1) Place the L-shape Bracket on the stopper as shown with the kickstand in the down position (view from the left side of the bike)

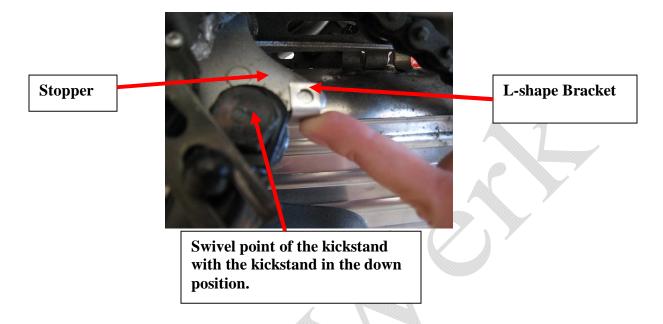

2) With help of another person holding the bike, **swing the kickstand to the upright position**. This way, the kickstand will hold the bracket in place. This is the easiest and the safest way to drill the hole.



3) Drill the hole in the stopper through the hole in the L-shape Bracket as shown

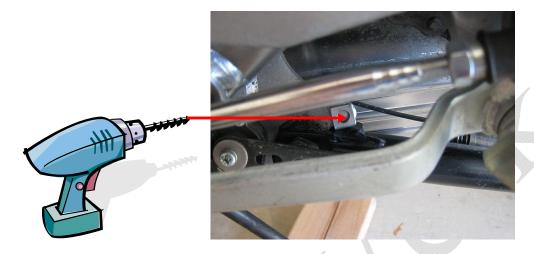

- 4) Insert the provided Phillips Screw with the screw head on the outside and tighten it with the provided nut from the backside (inside).
- 5) Once secured, the installed L-shape Bracket will generate additional 25 mm (1 inch) clearance between the swing arm and the original kickstand foot.