

# Kawasaki Versys, ER-6N, 650R, 1000, & other models Standard Flatfoot Assembly Instructions

Thank you for purchasing our Standard Flatfoot!

## Standard Flatfoot Components



**PARTS:** bottom plate, top plate, a spring,  
and 4 screws



Fully Assembled

## Tool needed for installation

- **From your garage toolbox:** Phillips Screwdriver

## Assembly Instructions

- 1) Slip the foot of the original kickstand through the top plate as shown in the photo, and make sure that the pointy side of the top plate faces to the outside of the bike.



View  
from the  
top

- 2) Swing the kickstand to the up position.
- 3) Place the spring in between the seat of the top plate and the original foot of the kickstand.




- 4) Insert the original kickstand foot into the cutout of the bottom plate as shown in the photo, and compress all four together. Make sure that the top plate is aligned with the bottom plate in such a way that their pointy sides face the same way to the outside of the bike.



Pointy sides of the top and bottom plates



- 5) While compressing all the components, install the first screw from the bottom. Follow with the remaining screws (after installing the first screw, the remaining three will be easy to install). Please remember to use Loctite Threadlocker No 242 Blue® with the Phillips screws.

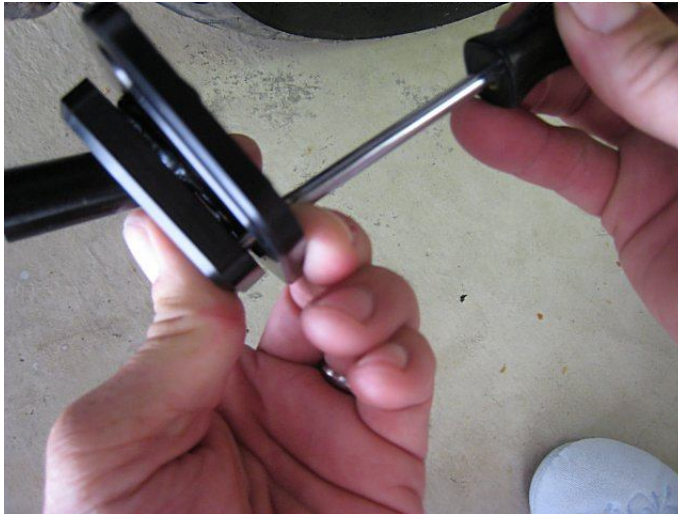

*We hope that you will enjoy your new Standard Flatfoot.*