

Kawasaki Versys 27 mm Highway Pegs Mounts Installation Instructions

Items included in the kit



2 Mount Arms



2 Front Clamps



2 Back Clamps



8 Bolts and 2 Dowel Pins

Tools needed for installation

- 5 mm Allen (hex) wrench from your motorcycle toolkit
- 6 mm Allen (hex) wrench from your motorcycle toolkit

Installation Instructions

1. Place the back and front clamp on the sides of the 27 mm engine guard/crash bars – either to the left or right of the SW-Motech sticker, as shown in the photo. Using a 5 mm Allen hex wrench, attach the **socket head cap screws**, starting with the two top ones, followed by the bottom two.



As you lightly tighten the screws, please ensure that the back and front clamps are parallel to each other.


Do not tighten the screws all the way at this time!

2. Insert a Dowel Pin in one of the front clamp's holes to reach an approximate desired location


If you want to change the angle of the mount's arm, just move the pin to a different hole.

Experiment with the pin's hole location to find the most desirable position. By moving the pin from one hole to another, you can change the angle by as little as 4 degrees at the time.

After you are satisfied with the angle, memorize the position of the pin, so you can do the left side mount in the mirror image later on, as shown in the photo.

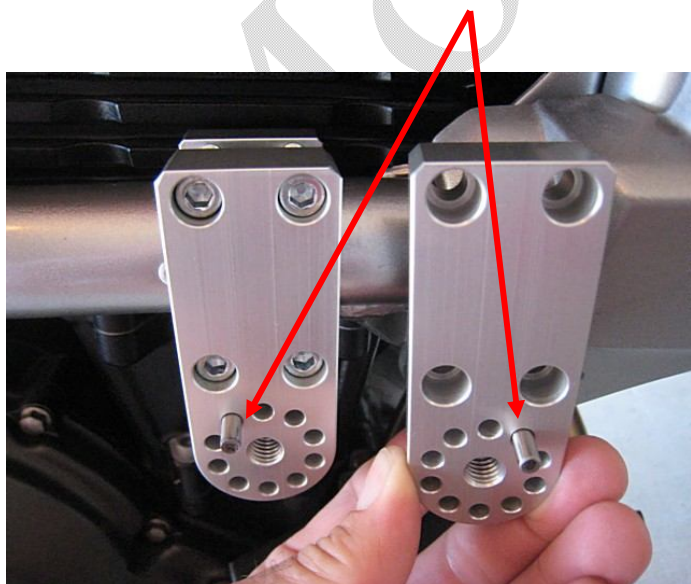

Once you have established a pin location and a desired angle of the mount's arm, attach the arm to the front clamp. Use a 6 mm Allen hex wrench to tighten the provided button head screw

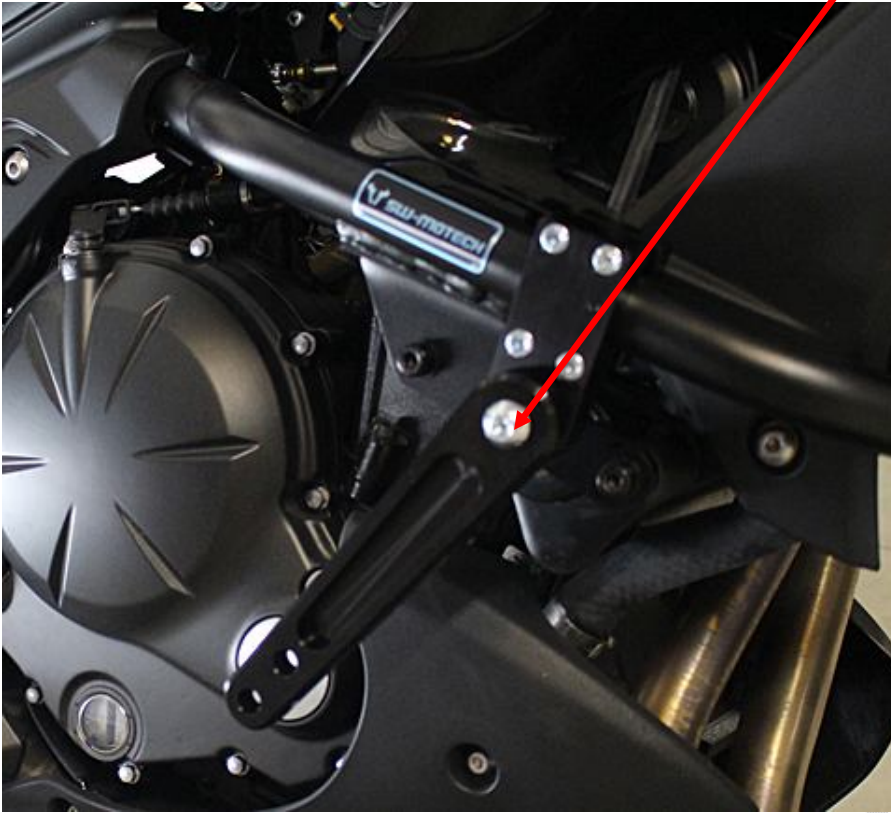

Now, **tighten the top four socket head cap screws on the front and rear clamps.** For tightening, please use an Allen hex wrench at medium strength, or if you have a torque wrench then tighten it at 25 N/m (2.5 kgf/m), (18 ft/lb). Attach a highway peg of your choice to each mount. You can use a lower or a higher attachment hole, depending on your preference.

The installation is now completed.



www.motowerk.com
27 mm mounts