


# Kawasaki Versys TomTom Rider® GPS Mount Installation Instructions

## Items included

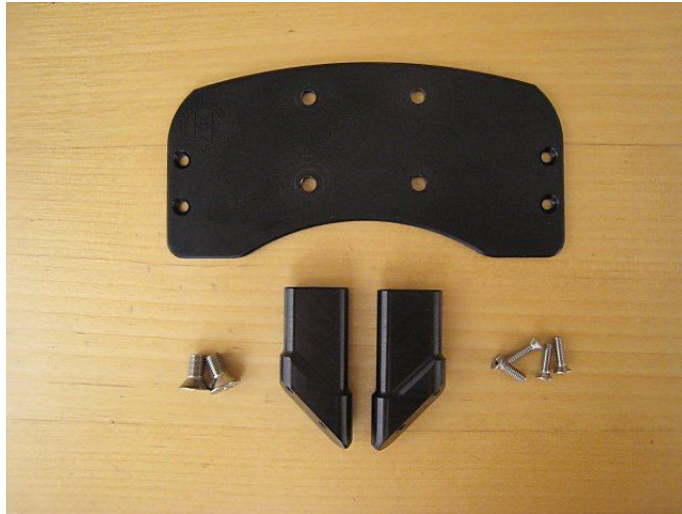

Main Plate  
2 Posts  
2 Phillips Large Screws  
4 Phillips Small Screws



4 M-5 Screws (provided)



4 washers (from TomTom RAM kit)

These screws and washers will be used to attach the TomTom mount to our GPS Mount

## Tools needed for installation



**From your garage toolbox** (from left to right):

- 8 mm (or 5/16") open wrench or adjustable wrench
- Phillips screwdriver

**From your Kawasaki Versys toolkit** (on the right):

- 4 mm hex wrench



**To attach TomTom mount to our GPS Mount:**

- Phillips screwdriver  
3 mm hex wrench (from TomTom RAM kit)  
4 mm hex wrench

## Installation Instructions

- 1) Assemble the GPS Mount.  
Lay down the Main Plate with the beveled edge of the plate down, and position the two posts as seen in the photo



- 2) Attach the posts to the main plate with the 4 small Phillips screws by putting the screws through the plate from the bottom side and screwing them into the posts



- 3) Attach the TomTom mount to our GPS Mount by sliding each of the four M-5 screws through the washers, and installing them through our GPS Mount Main Plate into the threaded holes in the TomTom mount, as shown:



- 4) Tighten the screws with the 3 mm hex wrench (from the TomTom RAM kit)
- 5) Plug in the TomTom power cable into the TomTom mount, as shown:





- 6) Remove 4 screws from the windscreen by using the 4 mm hex wrench and the 8 mm open wrench



- 7) Once the windscreen is removed, install the GPS Mount with the 2 large screws to the brackets of the windscreen.



- 8) Tighten all the screws (you may use Loctite® for added security) and position the power cable to your liking



- 9) Reinstall the windscreen



- 10) Slide TomTom GPS unit into its base



The installation is now complete.

**Thank you for buying our product!**