

## Speedy Pegs Installation Instructions

**Thank you for purchasing our Speedy Pegs!**


### Items included



2 Custom Foot Pegs



2 Extension Arms

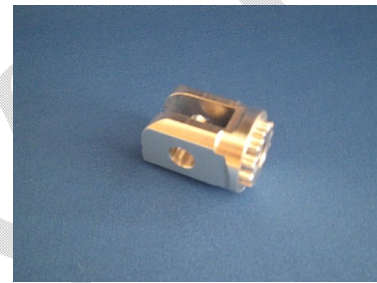

2 Adaptor Mounts



2 Long Screws



2 Short Screws

### Tools needed for installation

**From your Kawasaki motorcycle toolkit:**

- A small flat screwdriver (to remove the C-clip)
- 5 mm hex wrench (Allen wrench)

## Installation Instructions


1) Remove the original foot peg.

a) Remove the C-clip (snap ring) from the pin on which the foot peg pivots (you can use a flat head screwdriver to wedge it out). **Be careful not to lose the C-clip – it jumps out.**

b) Remove the pin and then remove the foot peg and the spring



2) Use the 5 mm hex wrench to attach the custom foot peg to the extension arm with a large screw provided. Tighten and set aside for now.

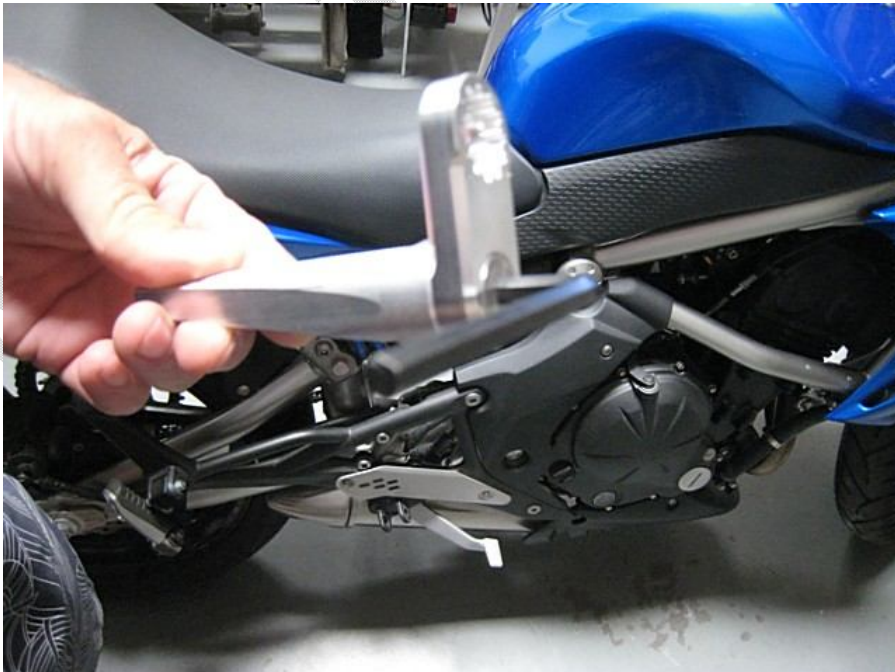

- 3) Get the adaptor mount and the bike's original pin, spring, and C-clip ready. Insert the spring into the adaptor mount as shown, making sure that the rounded edge of the adaptor mount is up.



- 4) Now, insert the pin and attach the C-clip as shown below.



- 5) Once everything is securely attached to the bike, screw the extension arm with foot peg to the adaptor mount with the short screw by using the 5 mm hex wrench.



Do not tighten yet. Try different positions to find the perfect one before tightening.



- 6) Repeat the above steps for the other side. Please remember to tighten the screws. You may also want to use Loctite Threadlocker No. 242 Blue on the screws.