
# Woodduck Inlay Kit Instructions

# Kit components

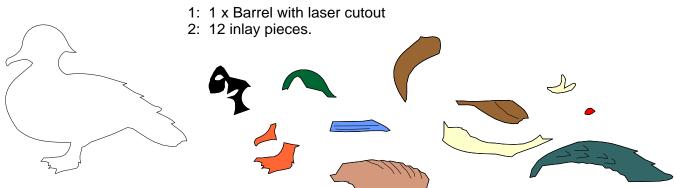

#### Step 1:

Remove all components from the plastic bag and place on a clean work surface. Please note that the components are small and you can loose them quite easily.

### Step 2:

Take the barrel with the laser cutout and slide the brass tube(27/64) into it. Please do not use any glue at this stage, this is only to assist you with the assembly process.

#### Step 3:

Take the Barrel with cutout and place the inlay into the opening .

Place Tail Piece inlay into the opening (See page two).

Take the main body section and placed it into its corresponding opening.

You can use a little bit of water and wet the inlay before you press it in.

Once the other pieces are into place the head and legs can be pressed into place.

Apply a small amount of thin CA glue so it would stick to the main barrel. You can use CA accelerator to speed up the curing of the CA glue.

## Step 5

Remove the brass tube and put a small drop of thin CA on each inserted part.

#### Step 6

Now you can trim / cut / sand the barrel to size and glue the brass tube into the barrel with a glue of your choice and please give it enough time to dry before turning the barrel into shape. Try to sand the barrel round and smooth before you use a skew or any other tool to finish your pen.

