



HD:108-B Slatwall Bundle



Hold all against wait with the รเลยหมาน เลอ อับพาก สร รกับพาก above. Check ever and draw a the along the top of the all.



Extend lines ventically to the full

height of the display and recheck



O

July your stellened method, Ucale and nark every stud along the life.

NUTE: Stude must be millin / ... ule sind ت ((الا منا، ۱۷۸۹)، الماني مناك ينيط (لا منيط ) م stud allyne with folie of the two with neve ตเ⊱ุกษา 1 เาเกา เรูเน



Insertinua il ig su evv l ilu SCIEW GUIDE



The mounting screws included are self drilling. The screw itself will drill the hole it requires



Place screw gulde Into channel at stud location Flinily press Duth yulde and dill ayalist rall and drive screw through rall โมโบ รโนติ

Nute. Mount screws hito studs within 



Rails will be nested back-to-back for safe shipping. Be sure to separate before assembling. (It may be necessary to use a screwdriver to separate rails)





Insert connector plate into back of slatwall.



Choose a location and height for your rack taking into consideration clearance required to add and remove firearms from racks. Begin Installation with the lowest row of rails.



Press rails together. Grasping the top rail, tap rails on a rug or a non maring surface to close gap.

9

5





stud alignment.

12

wall.

14

Mark and attach with screws


the additional row to complete



Check level and drive screws at each stud location in both the top and bottom channels.




Remove paper backing from adhesive strip and apply to end cap. Remove red backing.

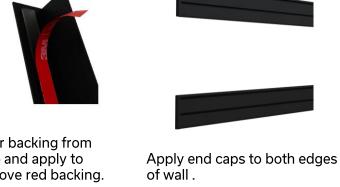





Tilt fixtures to insert into channel.

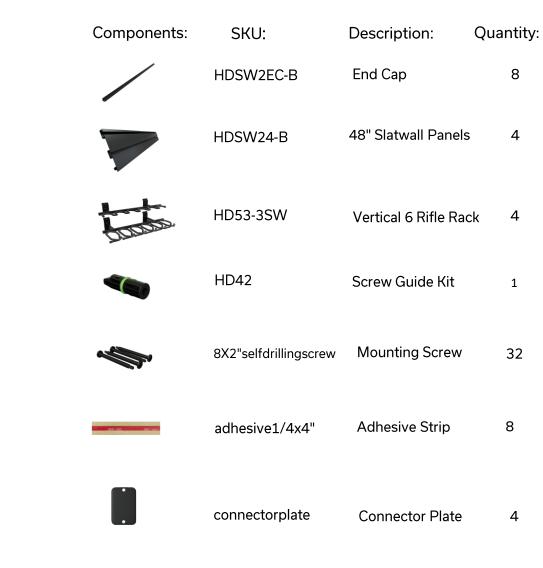

HD46

Slatwall Clip

16