

## **V-LINE MOLLE BOARD AND LONG GUN MOUNT INSTALLATION INSTRUCTIONS**

V-Line Molle Panel Board Kits come with the Molle Board (s) and/or supplied with the Long Gun Mounts along with the required mounting hardware for each specific Kit. When installing the a Molle Board without a Long Gun Mount follow Step 1. When installing a Molle Board with a Long Gun Mount follow Step 2 then go to Step 1 to install the Molle Board with the attached Long Gun Mount to the back of the Tactical Closet Vault.


### **Step 1.**

#### **Parts :**

Molle Board  
4-Bolts  
4-Washers  
4-Spacers  
1-Allen Wrench

Insert a bolt and washer in the four corner holes of the Molle Board. Next put a spacer on the bolt behind the Molle Board. Carefully move the Molle Board to the back of the Tactical Closet Vault and secure the bolts to the threaded inserts installed in the Tactical Closet Vault. Tighten the bolts, your Molle Board is now installed and ready to accept Molle equipped tactical gear.

**Note:** If installing the Full Molle Board repeat the above steps for the upper Molle Board. We recommend if installing both Molle Boards (upper and lower) to install the lower Molle Board first.

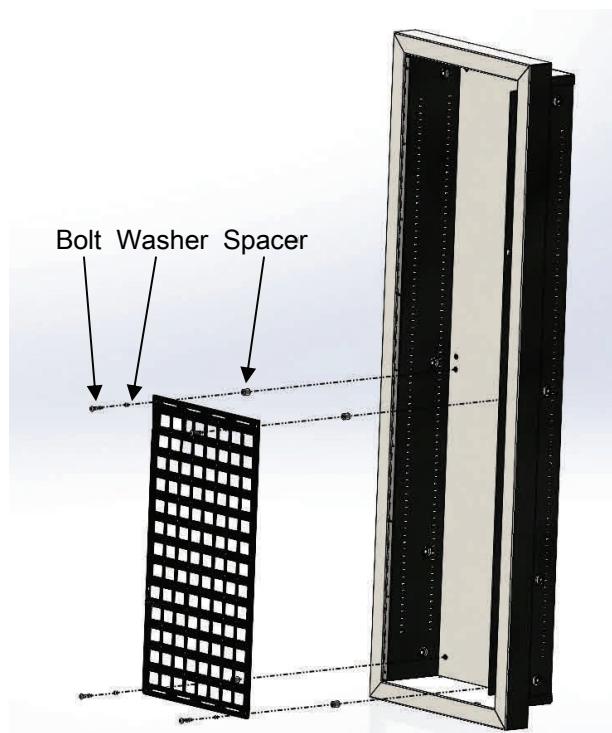


### **Step 2.**

#### **Parts :**


Molle Board  
3-Bolts  
3-Washers  
3-Long Gun Mounting Bolts  
2-Long Gun Mounting Brackets  
1 or 2 Long Gun Mounts  
2-Allen Wrenches

Test fit the Long Gun Mounts with the desired firearm to the Molle Board. Look to position so rear LG Mt Brackets line up with the cutouts for a secure fit. After securing the mounts, go to Step 1. and install the Molle Board with the attached LG mounts to the back of the Tactical Closet Vault

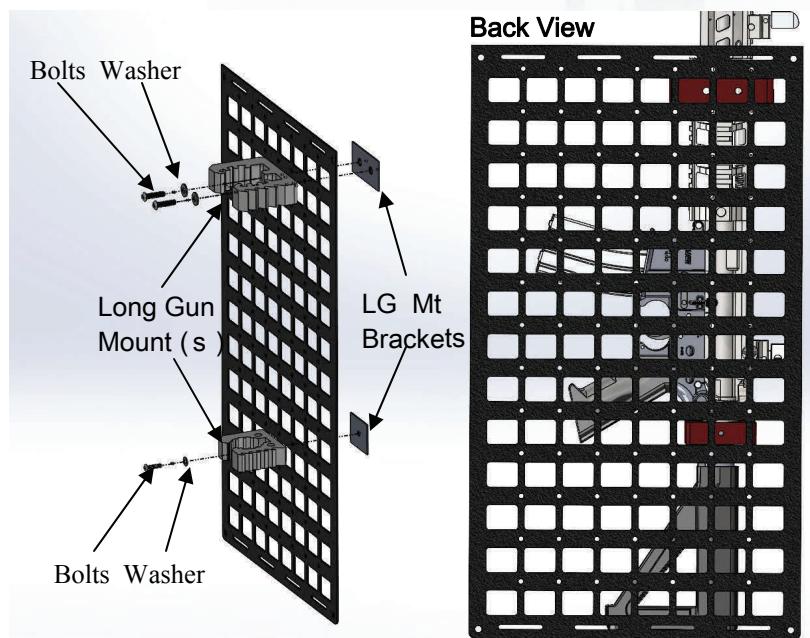

## Installation Tips

1. When Installing an upper and lower Molle Board in the back of the Tactical Closet Vault insure the squared corners are adjacent to one another in the middle of the Vault.

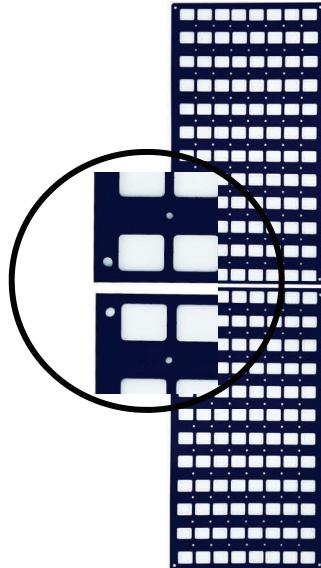

2. When installing the Long Gun Mounts test fit to the Molle Board before installing the in the Tactical Closet Vault.
3. Set firearm inside of clamps and move to desired position.
4. Mark Long Gun clamp positions with masking tape or some other non permanent marker.
5. Remove firearm from Long Gun Mounts and proceed to securing the Long Gun Mounts to the Molle Panel.
6. Install the Molle Panel to back of Tactical Closet Vault.

