

## Basic Installation Guideline for the Sunflex IR Privacy Frame.

Installation of this product is quite simple, but if you have little or no automotive technical knowledge it is recommended that you seek the assistance of a Mechanic or A/V Shop as they can install these very quickly and usually very cheaply.




The Frames should be mounted behind the license plate and we strongly recommend you mount them on the top of the plate.



You will need to wire the frames into any 12V power source that has constant power, or one that has power whenever the car is on. You may connect directly to the car battery. It is strongly recommended that you install a small on/off switch in the cabin of the car as it may be needed to turn the frames off. A switch is required if you connect to a constant power source to avoid running down the car battery during long periods of unuse.



After installation you can test the light using the following method. The light will be totally invisible to the human eye, so if you do not have access to an infrared camera you can use almost any digital or cell camera. Although cell-phone cameras have an IR filter most can only filter 97% of IR light so 3% will usually still break through. If the light is functioning you should be able to see a faint pinkish glow. Please remember that even though you cannot see the light, it is still very bright so do not stare directly at it at close range.

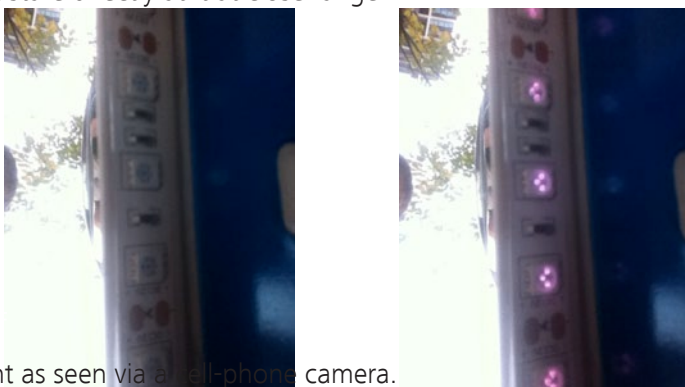

Light as seen via a cell-phone camera.



As seen from an IR CCTV Camera