



## **INSTALLATION GUIDE**

# JEEP JK KEYPAD MOUNTING PANEL FOR SP-8100 8-SWITCH PANEL POWER SYSTEM

[www.TeamTechOffroad.com](http://www.TeamTechOffroad.com)

[sales@teamtechoffroad.com](mailto:sales@teamtechoffroad.com)

25587 Conifer Rd  
Unit 105-220  
Conifer, CO 80433  
720-306-7263




1. Temporarily remove the upper interior trim piece above the rear view mirror while loosening the factory wiring attached to it.



2. Continue running the SP-8100 wiring harness from the engine bay area to the area above the rear view mirror at the TTO Switch Housing




3. Cut out and center template over the interior trim piece that was located above the rear view mirror

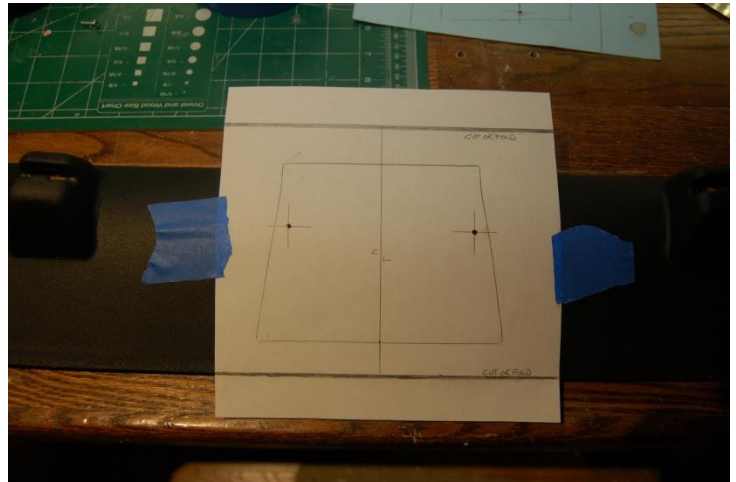


4. Drill two  $9/64$ " holes as indicated with the template. Then drill a  $1/2$ " hole in the center of the two  $9/64$ " holes using a  $1/2$ " UNIBIT. This hole is for the wiring to transfer through



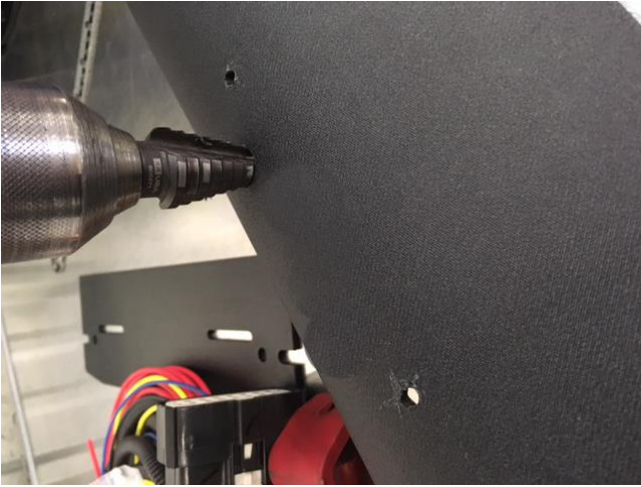

5. Attach Switch-Pro keypad bezel into the TTO housing and screw/lock in place using the two SP-8100 metal brackets.

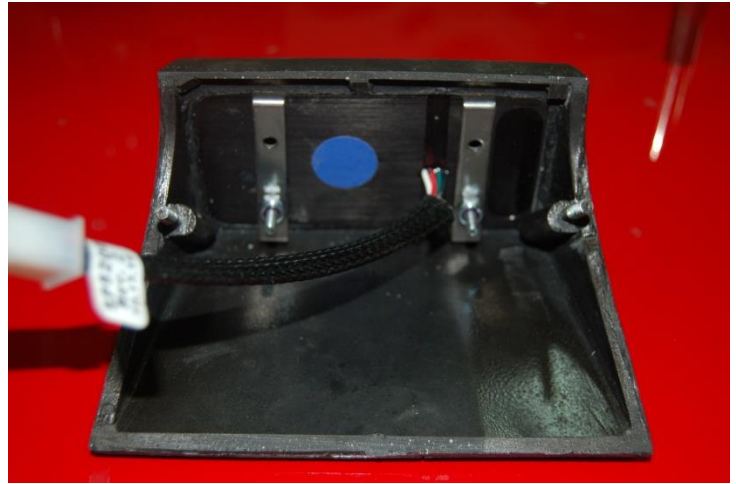



6. This is what you should see at this point . Ready to mount interior trim mounted to Housing back on to Jeep



7. Congratulations ..You have completed this housing mounting portion of the install. any questions please call 720-306-7263 or email us at sales@teamtechoffroad.com



More photos: <https://teamtechoffroad.com/collections/switch-pros/products/jeep-jk-keypad-mounting-panel-for-sp-8100-8-switch-panel-power-system>

Scale template (scroll down)

