



## HOOD STRUT KIT INSTALLATION

### Fits JL / JT / JK


Here's what's included in the kit. Install time is less than 30 minutes.

**Please Watch an Install Video Before Starting.**

**Click here to select an install video**




1 Bottom 10mm ball stud mounts here.

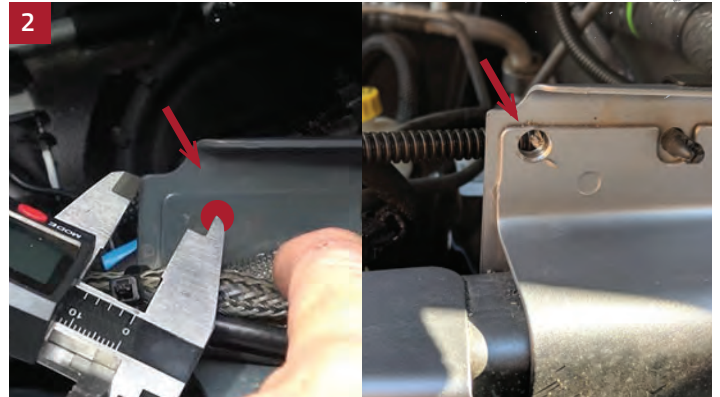

2 Measure 1/2" in from the leading top and side edge as shown. Mark spot with marker. Drill a 5/16" hole.



3 Mount 10mm ball stud and tighten.

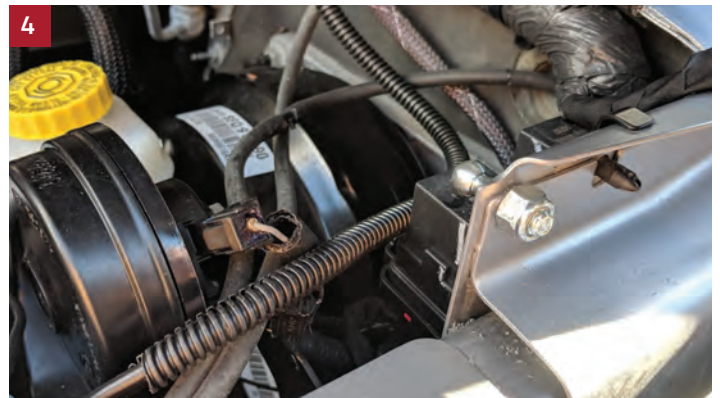

4 You are now ready to attach the strut.

# TEAM TECH OFFROAD



5 Attach strut to 10mm ball. Swing up strut to locate bracket position on hood.



6 Use self strapping screws enclosed in the kit to attach bracket to hood.



7 If your Jeep has an insulation kit, trim back insulation away from bracket.



8 You are ready to attach the strut.



9 Attach strut.

You are finished with side 1. Repeat instructions for side 2.



10 Side 2 completed.

**THANK YOU**  
for choosing  
**Team Tech Offroad**

**Questions?**  
**Please contact us!**

Install videos can be viewed at [www.teamtechoffroad.com/products/tto-hood-struts-07-17-jeep-jk-wrangler](http://www.teamtechoffroad.com/products/tto-hood-struts-07-17-jeep-jk-wrangler)

Sales@TeamTechOffroad • TeamTechOffroad.com • 720-307-7263