




TACOMA HOOD STRUT KIT INSTALLATION

Here's what's included in the kit. Install time is less than 30 minutes.

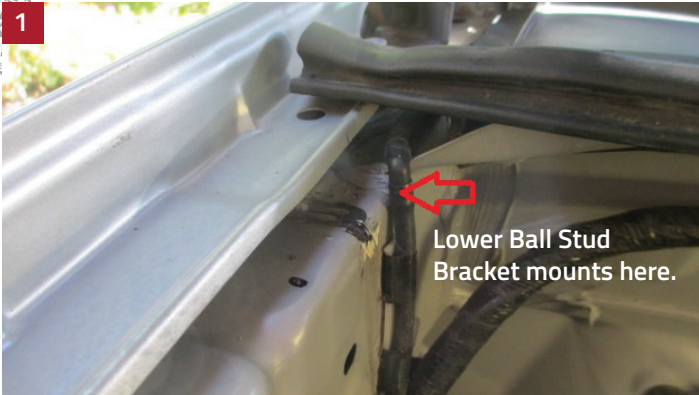

Place the rear edge of the bracket against the cowl weld (you may need to remove sealant from the top of the fender so bracket sits level).



With the Ball Stud Bracket against the weld, mark hole location with a marker. Drill 2 (1/8") holes.



Mount the Ball Stud Bracket and tighten the Tec screws.




You are now ready to attach the strut.

TEAM TECH OFFROAD



The upper Ball Stud Bracket mounts here.

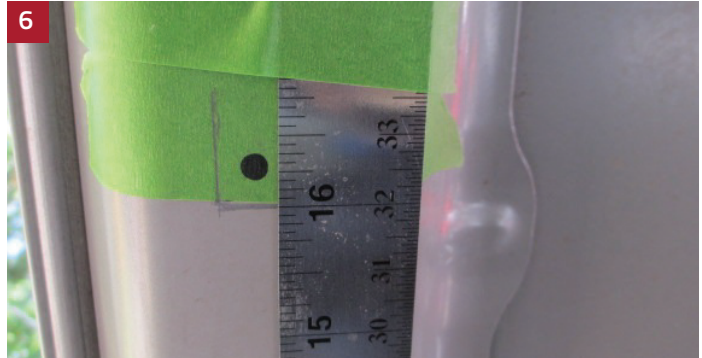

Measure 16" from the end of the hood hinge, the bottom of the Ball Stud Bracket mounts here. Place the outside (back) edge of the Ball Stud Bracket $1\frac{3}{4}$ " from the edge of the hood. Mark the hole locations with a marker. Drill 2 ($1/8$ ") holes.



Mount the Ball Stud Bracket and tighten the Tec screws.



You are now ready to attach the strut.



Attach strut.

You are finished with side 1. Repeat instructions for side 2.



Side 2 completed. Installation completed.

THANK YOU
for choosing
Team Tech Offroad

Questions?
Please contact us!