


REQUIRED TOOLS:

Phillips Head Screwdriver

INCLUDED HARDWARE:



#10-24 x .5" Phillips Head
Machine Screw (x8)

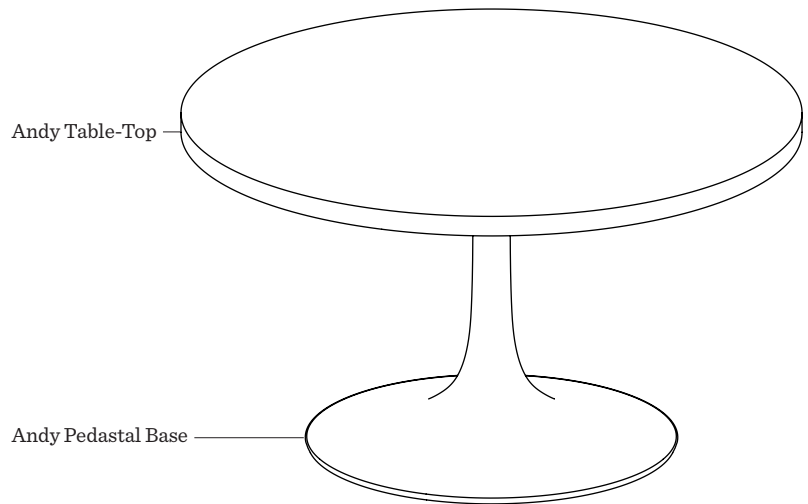

ASSEMBLY INSTRUCTIONS

1. Place Andy Table-Top upside down on a soft, secure surface.
2. Align Andy Pedestal Base Bracket with holes on underside of Table-Top as shown.
3. Thread all Machine Screws into holes by hand to ensure proper alignment, then tighten with a Phillips Head Screwdriver.

