

NOTES:

- Hardware and instructions are included for joist and non-joist locations. Choose the appropriate installation option based on your ceiling substrate.
- Fitter included for shade application.

REQUIRED TOOLS:

Electric Drill

1/8" Drill Bit for Joist Locations


3/8" Drill Bit for Non-joist Locations

Phillips Head Screwdriver


INCLUDED HARDWARE:




Swag Hook (x2)



#8 x 1.75" Wood Screw (x2)

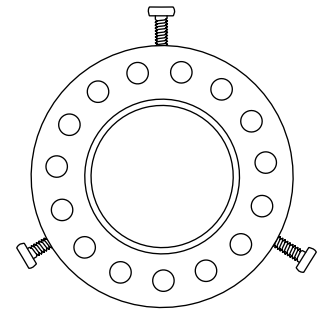

Threaded 2.25" Fitter


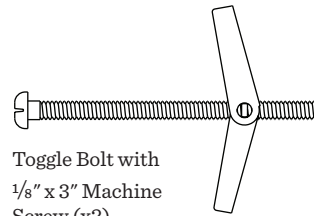


Toggle Bolt with 1/8" x 3" Machine Screw (x2)


INSTALLATION INSTRUCTIONS

1. Select and mark installation locations for Swag Hook. Determine ceiling substrate at both locations. For joist locations, proceed to Step 2. For non-joist locations, skip to Step 3.


2. For joist locations, drill through drywall and joist using 1/8" Drill Bit. Pass Wood Screw through Swag Hook base, then insert Wood Screw into pre-drilled hole and tighten using Phillips Head Screwdriver. Skip to Step 6 to complete installation.

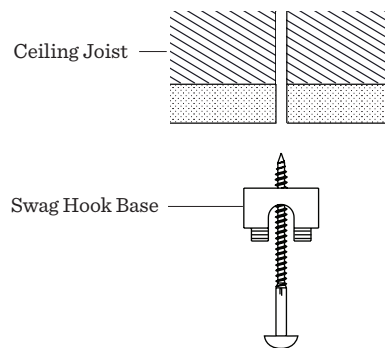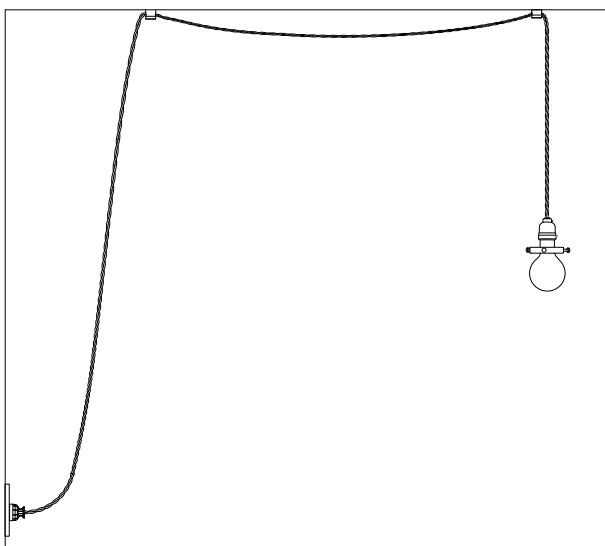


- In non-joint locations, drill through drywall with $\frac{3}{8}$ " Drill Bit. Clean up edge of hole so there is a flat surface for the Swag Hook to sit flush against. Pass Machine Screw through Swag Hook base and thread Toggle Bolt onto Machine Screw three rotations.

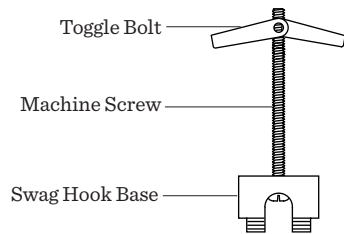

- Push Toggle Bolt through pre-drilled $\frac{3}{8}$ " hole. Toggle Bolt will spring open when it passes through the drywall.

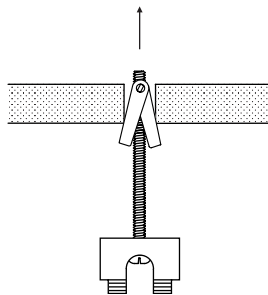

- While gently pulling the Swag Hook away from the ceiling, tighten using Phillips Head Screwdriver.

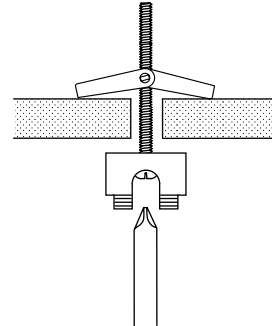

- Place Cord in groove and thread Cap onto Swag Hook Base. Tighten by hand. Repeat for other Swag Hook.

