

NOTES:

Judy can be installed as a cabinet knob, drawer pull, interior door knob, or as a hook at a non-stud or stud location. Choose the appropriate installation option below for your application.

REQUIRED TOOLS:

Electric Drill


Phillips Head Screwdriver

Drill Bit: $\frac{3}{16}$ " for Installation Option A

$\frac{1}{2}$ " for Installation Option B

$\frac{1}{16}$ " for Installation Option C


INCLUDED HARDWARE:



#10-24 x 1" Machine Screw (x1)



#10-24 x 1 $\frac{3}{4}$ " Machine Screw (x1)




#10-24 x 2" Machine Screw (x1)



#6 x 2" Wood Screw (x1)



#10 Split Lock Washer (x1)

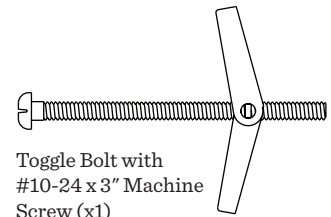


Toggle Bolt with #10-24 x 3" Machine Screw (x1)


INSTALLATION INSTRUCTIONS

OPTION A: CABINET KNOB, DRAWER PULL OR INTERIOR DOOR KNOB

1. Mark mounting location and drill through surface using $\frac{3}{16}$ " Drill Bit
2. Select Machine Screw length based on material thickness of cabinet/drawer/door. Insert Machine Screw through Lock Washer and into pre-drilled hole. Tighten using Phillips Head Screwdriver. Thread Judy Mounting Plate onto Machine Screw.

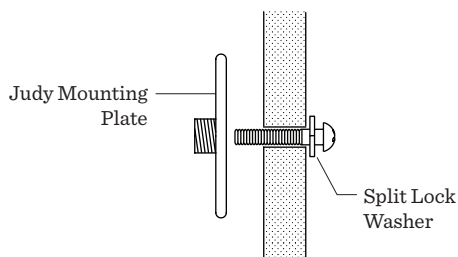


3. Thread Judy knob onto Judy mounting plate. Tighten by hand.

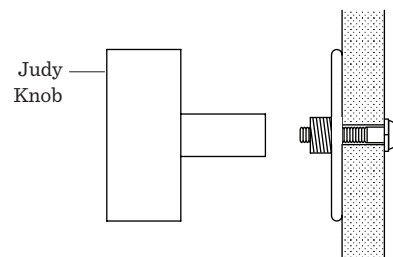


OPTION B: HOOK–NON-STUD LOCATION


1. Mark mounting location and drill through drywall using $\frac{1}{2}$ " Drill Bit. Clean up edge of hole so there is a flat surface for the hook to sit flush against.
2. Thread 3" Machine Screw completely into Judy Mounting Plate.

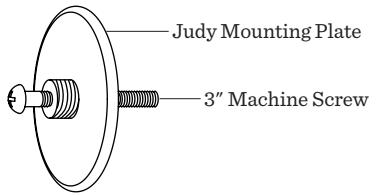


3. Thread Toggle Bolt onto Machine Screw three rotations.

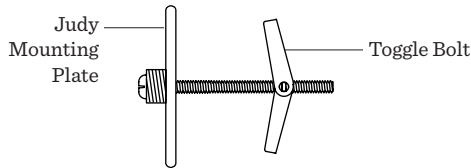


4. Push Toggle Bolt through pre-drilled $\frac{1}{2}$ " hole. Toggle Bolt will spring open when it passes through the drywall.

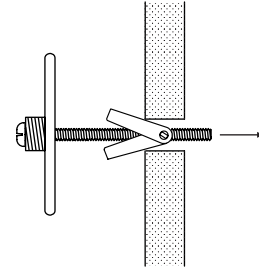

5. Tighten Machine Screw using Phillips Head Screwdriver.

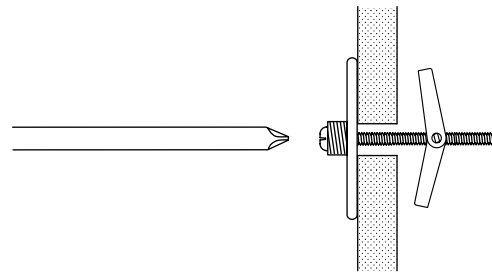


6. Thread Judy Knob onto Mounting Plate. Tighten by hand.

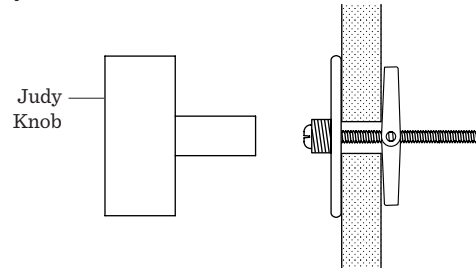

OPTION C: HOOK–STUD LOCATION

1. Mark mounting location and drill through drywall and stud using $\frac{1}{16}$ " Drill Bit.
2. Screw the Mounting Plate partway onto the #6 x 2" Wood Screw, then insert screw into drilled hole and tighten using Phillips Head Screwdriver.

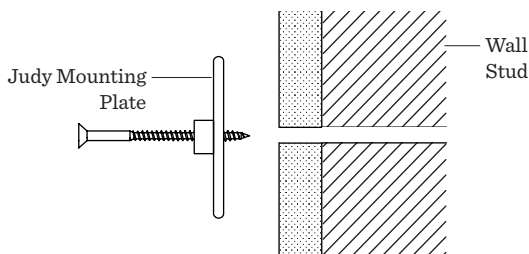

3. Thread Judy Knob onto Judy Mounting Plate. Tighten by hand.

