

NOTES:

Hardware and instructions are included for joist and non-joist locations. Choose the appropriate installation option based on your ceiling substrate.

REQUIRED TOOLS:

Electric Drill


1/8" Drill Bit for Joist Location

3/8" Drill Bit for Non-joist Location


Phillips Head Screwdriver

INCLUDED HARDWARE:

Swag Hook (x1)




#8 x 1.75" Wood Screw (x1)

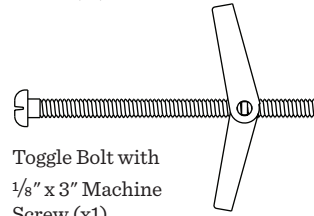


Toggle Bolt with 1/8" x 3" Machine Screw (x1)

INSTALLATION INSTRUCTIONS


1. Select and mark installation location for Swag Hook, and determine ceiling substrate. For joist location, proceed to Step 2. For non-joist location, skip to Step 3.
2. For joist location, drill through drywall and joist using 1/8" Drill Bit. Pass Wood Screw through Swag Hook base, then insert Wood Screw into pre-drilled hole and tighten using Phillips Head Screwdriver. Skip to Step 6 to complete installation.

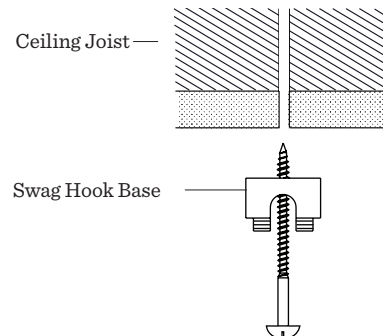


3. In non-joist location, drill through drywall with $\frac{3}{8}$ " Drill Bit. Clean up edge of hole so there is a flat surface for the Swag Hook to sit flush against. Pass Machine Screw through Swag Hook base and thread Toggle Bolt onto Machine Screw three rotations.

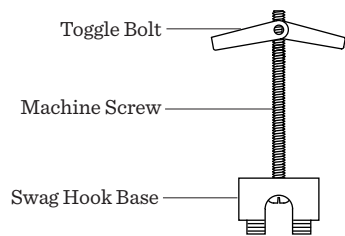

4. Push Toggle Bolt through pre-drilled $\frac{3}{8}$ " hole. Toggle Bolt will spring open when it passes through the drywall.

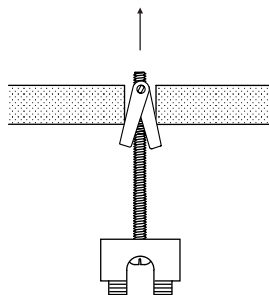

5. While gently pulling the Swag Hook away from the ceiling, tighten using Phillips Head Screwdriver.

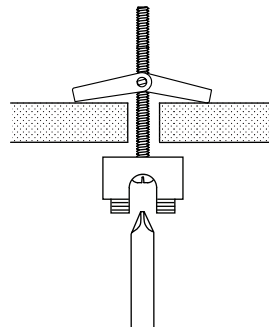

6. Place Cord in groove and thread Cap onto Swag Hook Base. Tighten by hand.

