

7X7 SOCK IT! LITE STAKE-DOWN BASEBALL / SOFTBALL NET

ASSEMBLY INSTRUCTIONS

Our video instructions provide the best guidance for setting up your Sock It! Baseball/Softball Net. They can be viewed online at



Please call us if you have any questions or concerns at **1-855-4RUKKET**
Please read our product safety warnings before setup


Parts Included




WARNING

Please use adult supervision and follow the instructions when setting up and using this net. Regular use or abuse will eventually strain the netting and may break it. Do not stand behind the net. This net is not intended for personal protection. This net deflects fast moving objects, so people should be at least ten (10) feet away.


Prior to Use: Inspect the netting and frame for damage or wear. Make sure the frame and net are assembled correctly and on a flat surface, at least ten (10) feet away from structures and vehicles. The user should be positioned directly in front of the net. Failure to follow these precautions could result in serious injury or damage to property.

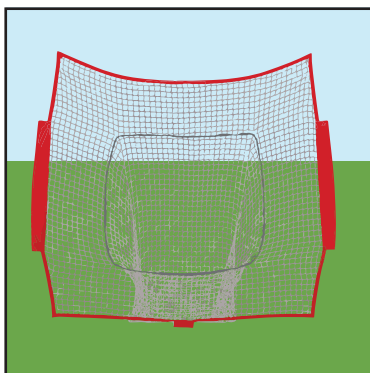

1. Lay out net flat on the ground red velcro tab closest to you. There should be sleeves on the left and right. Note: Red velcro tab used for orientation purposes only

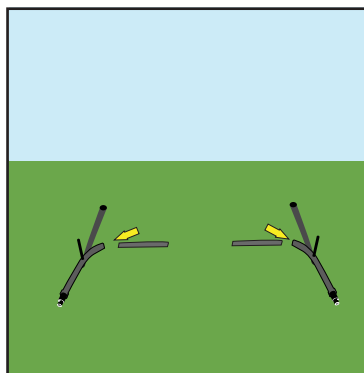

2. Slide middle bar piece into the receiving pole across from the angled pole insert sections.

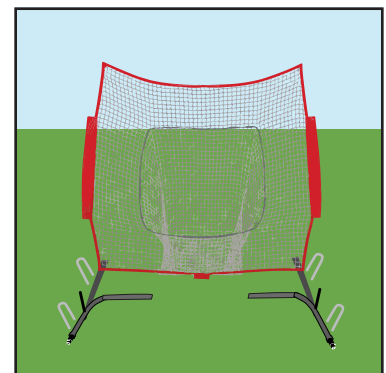


3. Set out the two base pieces so they are in line with the sleeves of the net. Stake down the pieces through the vertical holes.


QUESTIONS? GIVE US A CALL! (1-855)-478-5538




7X7 SOCK IT! LITE STAKE-DOWN BASEBALL / SOFTBALL NET ASSEMBLY INSTRUCTIONS

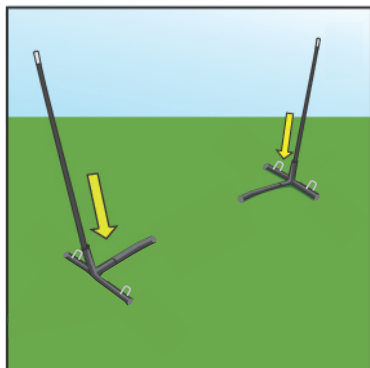


4. Install the lower black rods with coupling tubes up, into angled pipes.

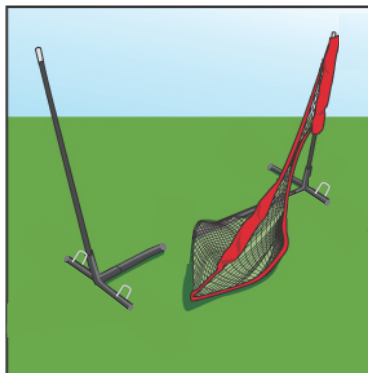


5. Thread sleeve over black ride. Make sure logo is not upside down.

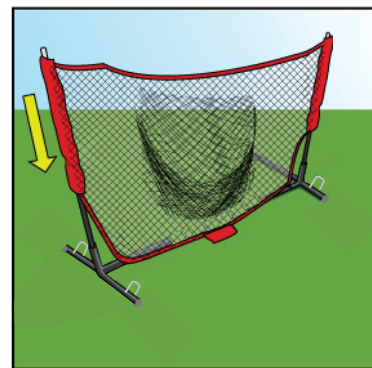


6. Repeat with sleeve pocket over other black rod.

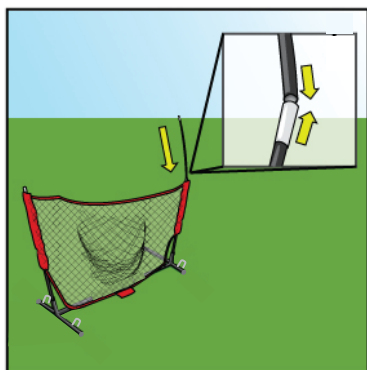


7. Take black rod and slide into lower rod's coupling tube.

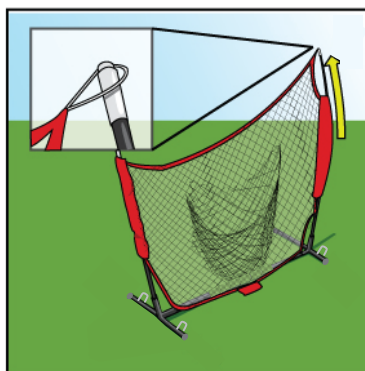


8. Hold black rod while pulling sleeve up. Loop white cord over rod top.

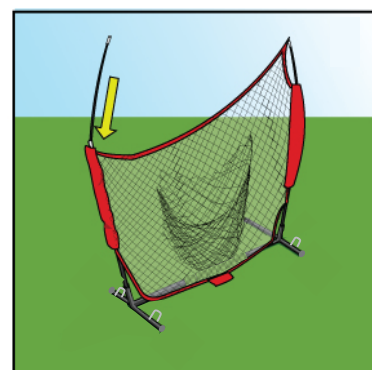

9. Take the last black rod and slide into rod coupling tube.

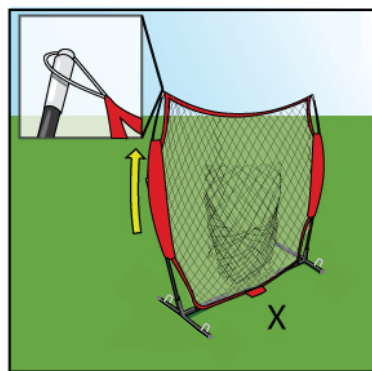

10. Grip black rod and pull sleeve up. Loop cord over pole top.

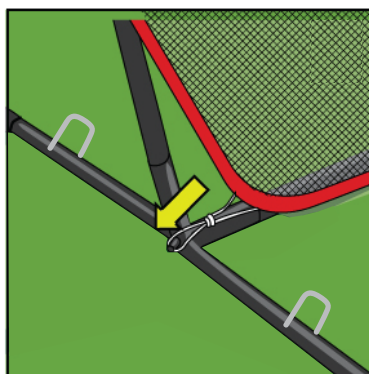

11. Take lower elastic loops and place under stud on both end legs. Wrap velcro around frame.

QUESTIONS? GIVE US A CALL! (1-855)-478-5538

RUKKET
SPORTS