




Step one:  
Loosen and unscrew the top and bottom cable gland connectors

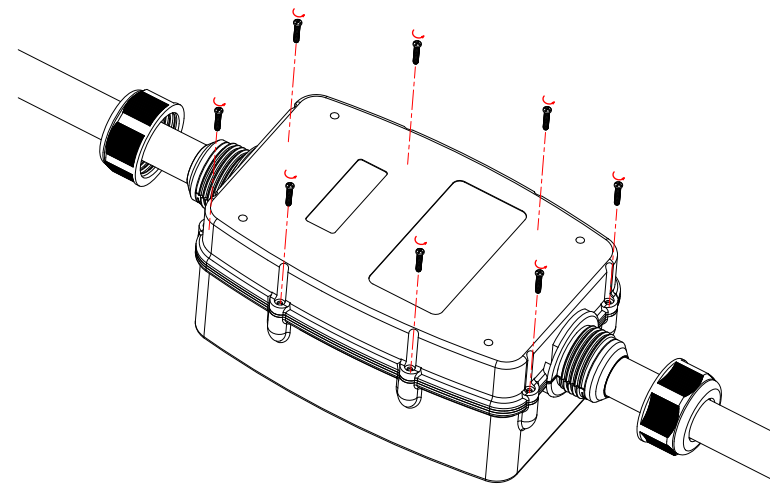


Step two:  
Unscrew the 8 Phillips screws on the back side of the unit

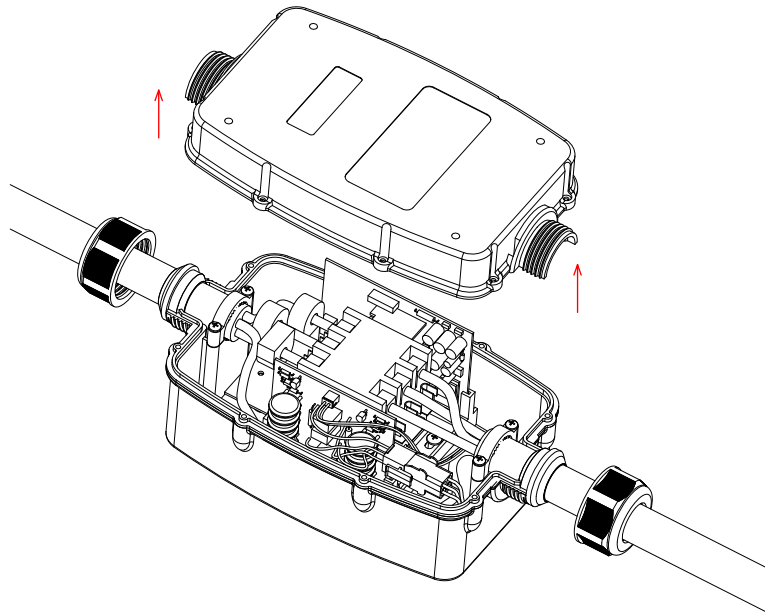


Step three:  
Carefully separate the top and bottom halves of the Power Watchdog Unit.

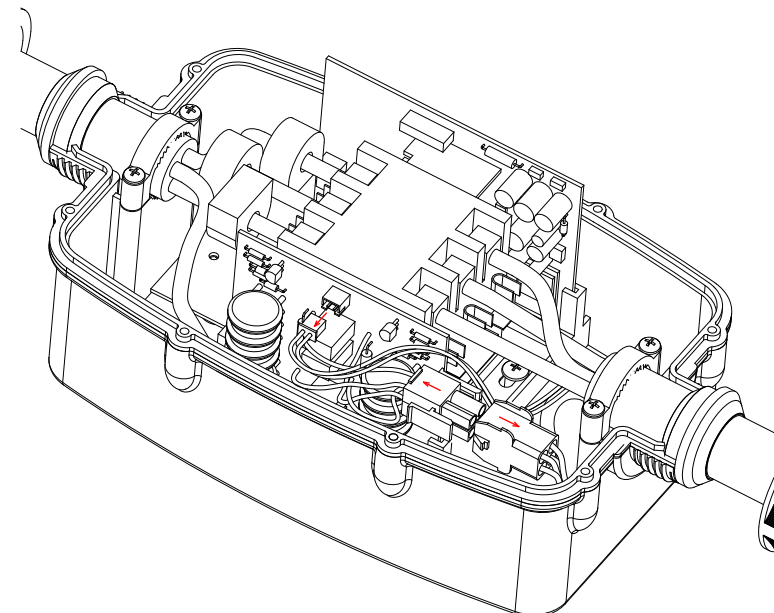


Step four:  
unclip the connections. Take note of where these connections come from.

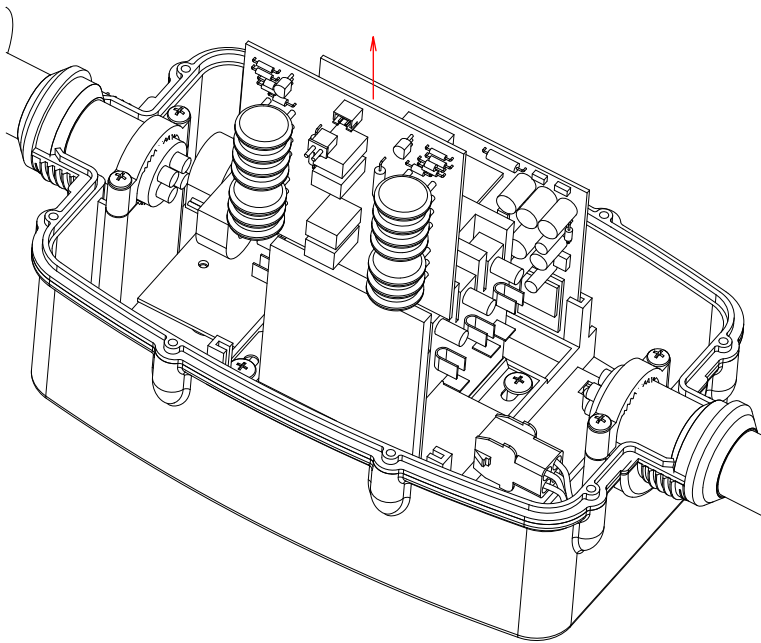

Step five:  
Carefully slide out the used up surge module.

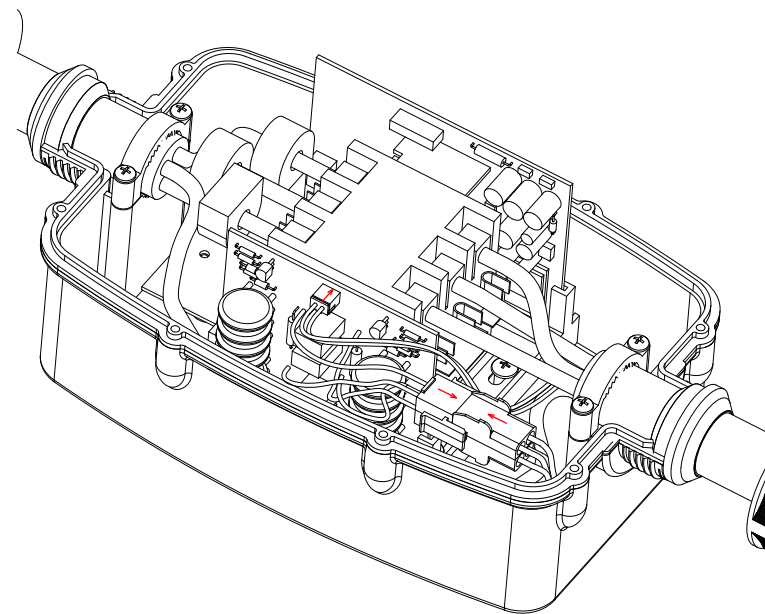

Step six:  
Slide in the new surge module into the slots inside the Power Watchdog unit.  
clip the connections.

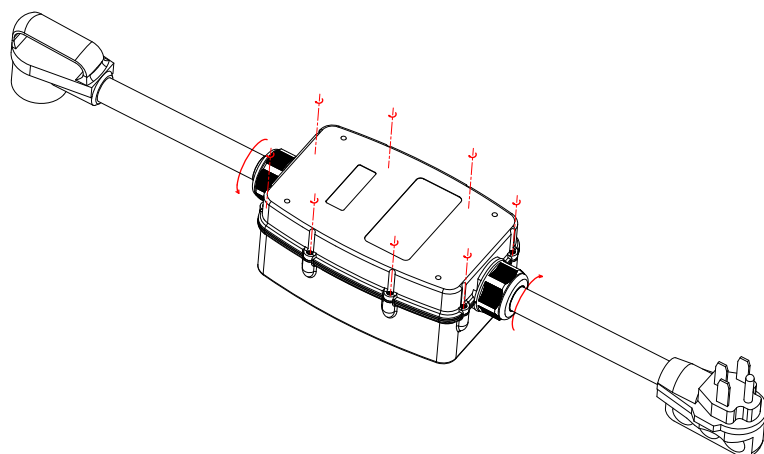

Step seven:  
Place top and bottom halves together, rescrew all the screws, tighten down the cable gland connectors.