


Included Components & Hardware

French Cleat (1)
Phillips Head Screws* (2)
Wood Screws (6)
Console (1)


Tools Needed Power Drill With a Phillips Bit and Drill Bit Stud Finder Level Notes

Mounting requires 2 people. *The French cleat has 2 Phillips head screws preattached to the back.

Console (1)

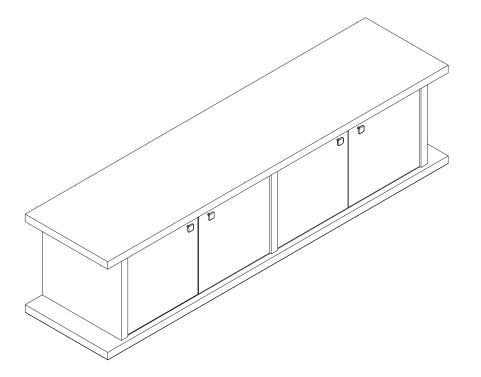

French Cleat (1)

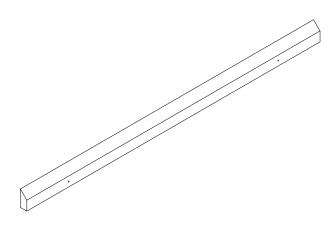

Phillips Head Screws* (2)




Wood Screws (6)



Step 1


Remove the two Phillips head screws that affix the French cleat to the back of the console and set them aside, as they will not be needed for mounting.

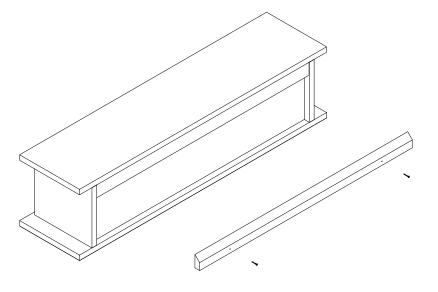


Step 2

Locate the studs in your wall using a stud finder, then position the French cleat so it is level on the wall.


Reference the image at right to ensure that the correct side of the French cleat is flush against the wall.

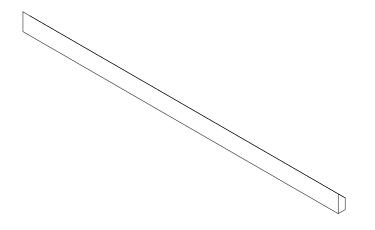

Step 3 Drill 6 pilot holes through the cleat and the wall, ensuring that 3 of the holes are directly on the studs.

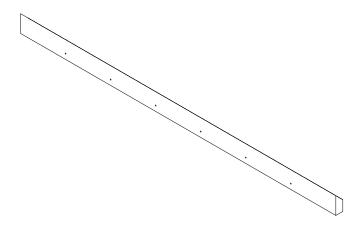


Step 4 Insert the 6 wood screws into the pilot holes, then tighten them with your power drill.

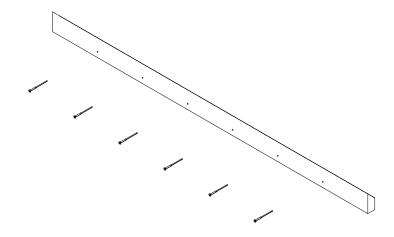

Step 5

Take a moment to confirm that the hardware is secured tightly at all connection points.

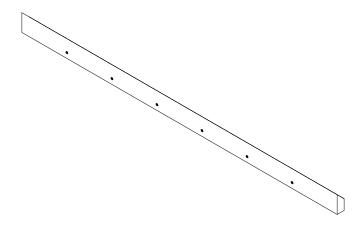

Step 6

With two people lifting the console, slide it onto the French cleat, ensuring it is flush against the wall.

