


# Wooden Rocking Kneeling Chair - Black Seat Instruction Manual

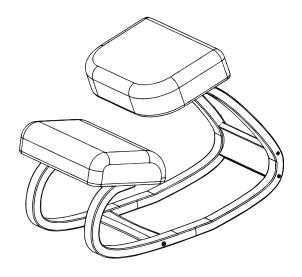

#### SKU: CHAIR-K04R




Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/chair-k04r

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST







www.vivo-us.com Chat live with an agent!



309-278-5303

### **MARNING!**

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Use this product on a stable, level surface. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. Do not stand on this product. Do not place fingers under rockers. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly, or inappropriate use.




#### **WARNING: CHOKING HAZARD**

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.



WARNING: THIS PRODUCT CAN RESTRICT CIRCULATION TO LEGS WITH PROLONGED USE.

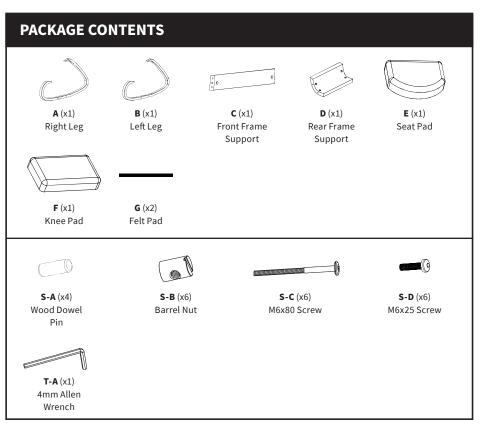






DO NOT EXCEED WEIGHT CAPACITY. Failure to do so may result in serious injury.



## ASSEMBLY STEPS


#### STEP 1

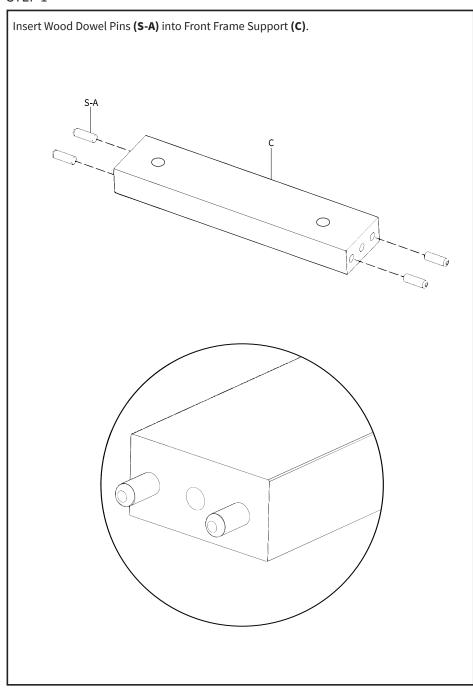

Insert Barrel Nut (S-B) into the hole underneath Front Frame Support (C). Mount Front Frame Support (C) to Leftt Leg (B) with M6x80mm Screw (S-C), making sure the wider end of Front Frame Support (C) is facing forward. Tighten M6x80mm Screw (S-C) with 4mm Allen Wrench (T-A). Wider End 0 0


STEP 3 Mount Rear Frame Support (D) to Left Leg (B) with M6x80mm Screws (S-C) and Barrel Nuts (S-B), making sure the wider end of Rear Frame Support (D) is facing down. Tighten M6x80mm Screws (S-C) with 4mm Allen Wrench (T-A). В S-C S-B


#### STEP 4

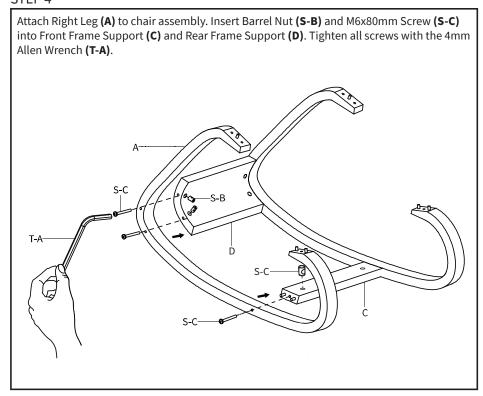

#### STEP 5


Mount Seat Pad (E) with the rounded end facing forward to the assembled frame using M6x25mm Screws (S-D) in one of two mounting positions, depending on user preference. Note, if you are taller, you will want to choose the set of holes closest to the front of the chair. Tighten screws with 4mm Allen Wrench (T-A).

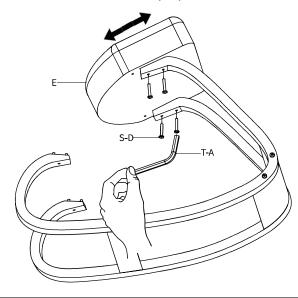

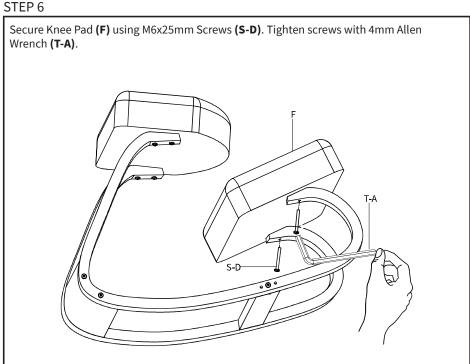

Otionally, Felt Pags (G) can be applied to the underside of the chair assembly.

**NOTE:** The wood fibers may compress over time as the chair is used, causing the screws to loosen. 4mm Allen Wrench **(T-A)** should be kept available to periodically re-tighten the screws.

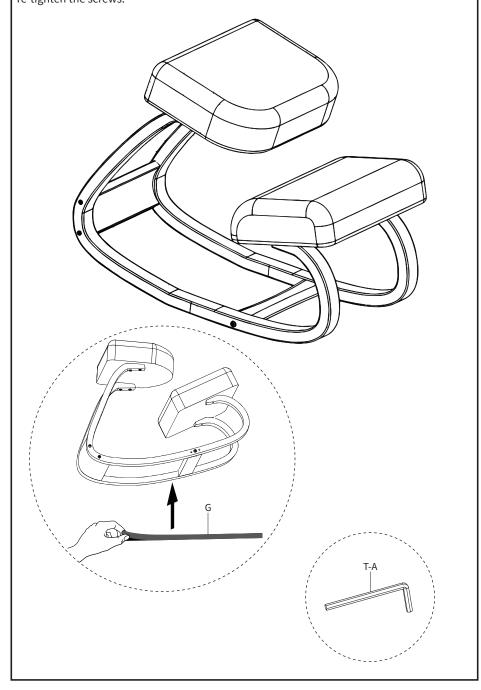



#### Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



www.vivo-us.com Chat live with an agent! AVG. RESOLUTION TIME (within office hrs): < 15 M



help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr