




Love your new VIVO setup and want to share?
Tag us in your photo! @vivo_us

LAST UPDATED: 10/25/2022
REV1




Black Magnetic Cable Management Vertebrae

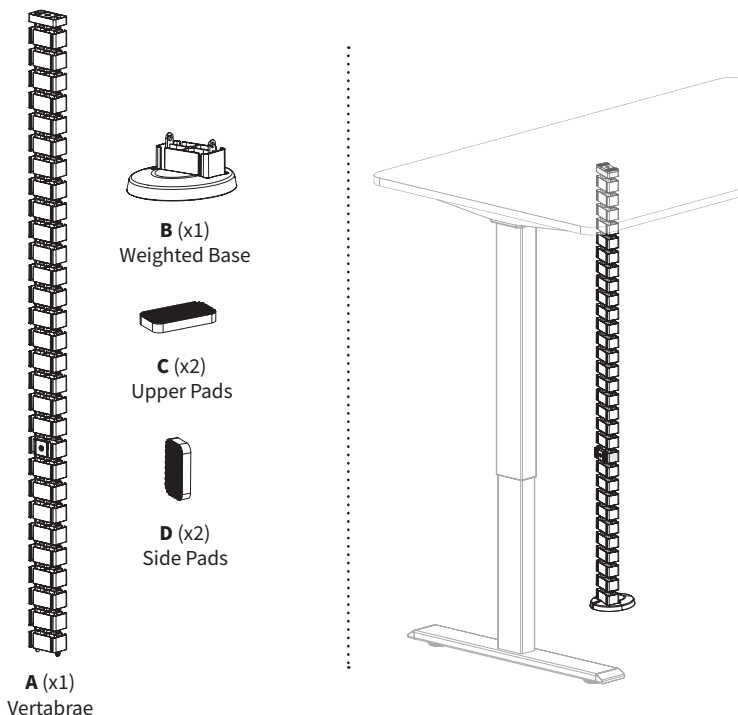


STEP 1

Peel adhesive backing and adhere Upper Pads (C) and Side Pads (D) to the top and front side of Vertebrae (A).

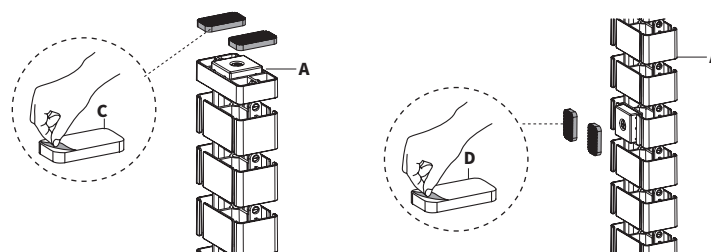


STEP 2

Connect top of vertebrae assembly to metal underside of desk frame.

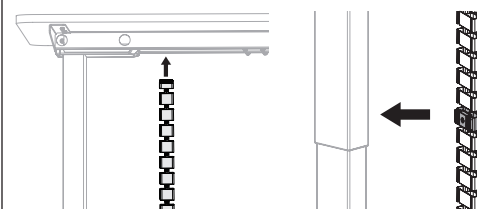

Secure cables into vertebrae assembly and connect Weighted Base (B).

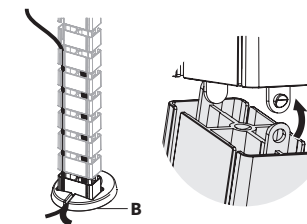

SKU: DESK-AC01M

⚠ WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual and do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly, or inappropriate use.



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/desk-ac01m>

We're Here to Help!

Open **Monday - Friday 7:00am - 7:00pm** CST, our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.

✉ help@vivo-us.com AVG. RESPONSE TIME (within office hrs): **1HR 8M**

💬 www.vivo-us.com Chat live with an agent! AVG. RESOLUTION TIME (within office hrs): **< 15 M**

☎ 309-278-5303 AVG. RESOLUTION TIME (within office hrs): **5M 4S**