




Black Clamp-on Keyboard Tray with RGB Pad

Instruction Manual

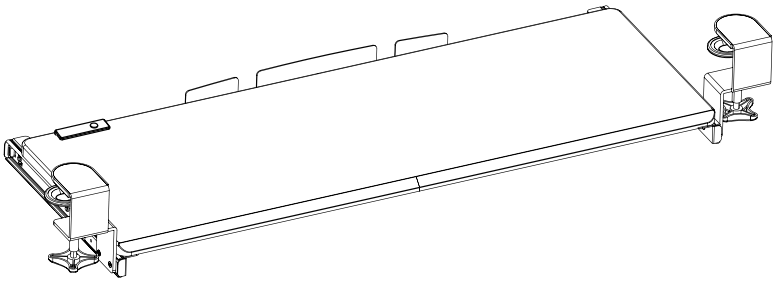

SKU: MOUNT-KB05P



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/mount-kb05p>

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com
Chat live with an agent!



309-278-5303


WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.


PACKAGE CONTENTS




A (x1)
Keyboard Tray



B (x2)
Connecting Plate



C (x1)
Keyboard Stop




D (x1)
Slider Brackets



E (x1)
Clamps



F (x2)
Pad



G (x1)
Mouse Pad



H (x1)
Power Cable



S-A (x6)

M4x7mm Flat Head Screw



S-B (x8)

M5x12mm Screw



S-C (x12)

M5x12mm Flat Head Screw

TOOLS NEEDED

NOTE: SOME HARDWARE INCLUDED MAY NOT BE USED



Phillips
Screwdriver

DO NOT EXCEED WEIGHT CAPACITY.


Failure to do so may result in serious injury.

**11lbs
(5kg)**

ASSEMBLY STEPS


STEP 1

Assemble Keyboard Tray (**A**) using Connecting Plates (**B**) and M5x12mm Flat Head Screws (**S-C**). Tighten with a Phillips screwdriver.

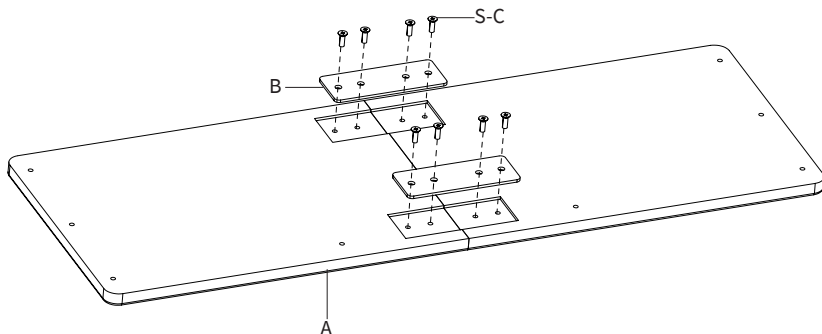


STEP 2

Attach Keyboard Stop (**C**) to the back of Keyboard Tray (**A**) using M5x12mm Flat Head Screws (**S-C**) and a Phillips screwdriver. Assemble Slider Brackets (**D**) to Keyboard Tray (**A**) using M5x12mm Screws (**S-B**), and tighten with a Phillips screwdriver. Slider Brackets (**D**) should protrude from the back of the keyboard tray assembly.

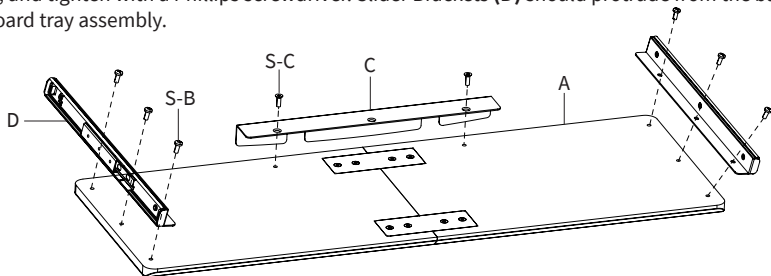


STEP 3

Assemble Clamps (**E**) to the Slider Brackets (**D**) using M4x7mm Flat Head Screws (**S-A**). Tighten with a Phillips screwdriver.

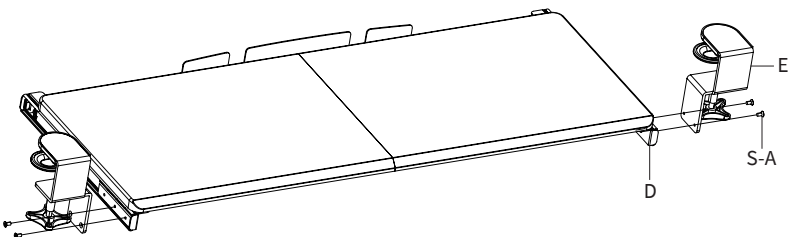


STEP 4

Place Mouse Pad (**G**) on Keyboard Tray (**A**). Plug Power Cable (**H**) into Mouse Pad (**G**) and plug the other end into a 5V USB power supply.

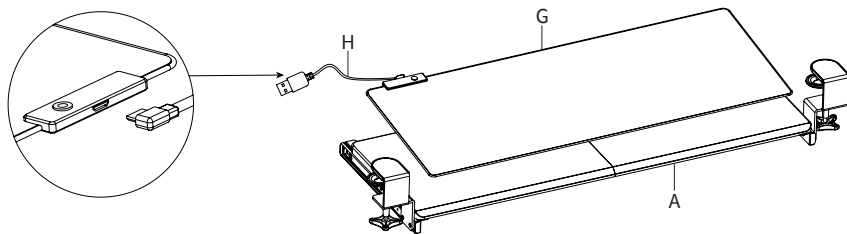

STEP 5

Place Pads (**F**) on the underside of each Clamp (**E**). Place assembled keyboard mount on the edge of the desktop and tighten Clamps (**E**).

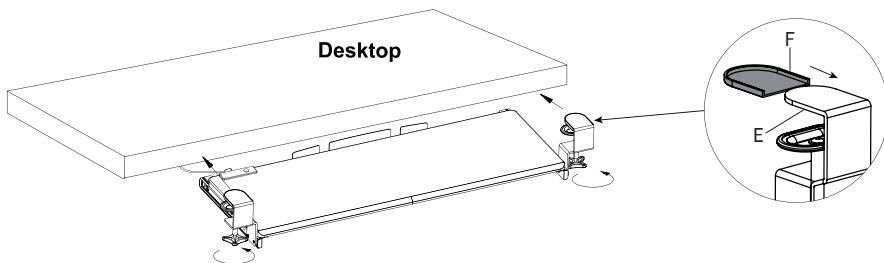



Open **Monday - Friday 7:00am - 7:00pm** CST,
our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (*within office hrs*): **5M 4S**



www.vivo-us.com
Chat live with an agent!

AVG. RESOLUTION TIME (*within office hrs*): **< 15 M**



help@vivo-us.com

AVG. RESPONSE TIME (*within office hrs*): **1HR 8M**

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr